

# Causes and how to fix the error of the camera not recognizing the memory card

Summary of causes of the camera not recognizing the memory card. How to fix the error of Yoosee Camera not recognizing the memory card, Ezviz Camera not recognizing the memory card...

**Camera not recognizing memory card** is a common problem that many users encounter. In the article below, TipsMake will help you find the cause and how to fix this situation.

## Characteristics to identify a camera that does not accept a memory card

1. The camera is jerky, lagging and automatically turns off the recording function while in use.
2. Even though there is plenty of free space, the camera can only store images and videos for 2 - 3 days.
3. Videos and images are stored intermittently and incompletely.
4. When clicking to view a video or image the screen only shows black.

## Causes of camera not recognizing memory card

### **Poor connection and contact port causes the camera to not recognize the memory card.**

The connection ports on the camera or on the memory card may be oxidized or dirty, which causes instability in the connection between the memory card and the camera.



*Check the contact on the card and the camera does not recognize the memory card*

### **Camera does not accept poor quality memory card**

One of the main reasons is that the memory card is damaged or not formatted properly. Currently, there are many memory card suppliers on the market, but there are also many counterfeit memory cards. Using poor quality memory cards will greatly affect the storage and recording of the camera.

### **Memory card has a write speed not suitable for camera**

The Speed Class index is used to measure and classify the writing speed of memory cards. Each Class will specify a certain minimum speed for each type of memory card, the higher the class, the faster the writing speed.

Some specific examples are as follows:

1. Class 2: minimum 2Mbps
2. Class 4: minimum 4Mbps
3. Class 6: minimum 6Mbps
4. Class 10: minimum 10 Mbps

However, these Class levels of memory cards are only the minimum levels committed by the manufacturer. So when choosing to buy a memory card, users should prioritize choosing branded cards, and should choose the memory card's writing speed suitable for the camera they own.

### **Camera has poor memory card reading function**

Nowadays, cameras are becoming more and more popular. We can see cameras everywhere from homes to offices, supermarkets, etc. Along with that is the diversity of models as well as distribution and production units.

However, there are many low-quality, low-cost cameras on the market. The camera has poor image storage quality and poor memory card reading function. This makes the situation of the camera not recognizing the memory card more common.



*Poor reading function causes the camera to not recognize the memory card*

## **Camera and memory card are not compatible.**

Each camera line will have its own compatible memory card line. Therefore, choosing the right memory card to ensure the best camera performance is essential. Currently, there are 3 standard memory card lines for you to choose for your camera:

1. SD memory card: memory card specifically for Wifi cameras
2. SHDC memory card: this type has a capacity ranging from 2GB-32GB, often used for cameras with hardware that supports SDHC and SDXC.
3. SDXC memory card: this type has a capacity of about 32GB - 2TB, used for devices that support SDXC.

## **How to fix camera not recognizing memory card**

Depending on the reason why the camera does not recognize the memory card, there will be a corresponding solution. So when encountering this situation, you can refer to some of the solutions below.

### **Should buy camera at reputable quality address**

To ensure the best quality camera experience, finding a reputable camera supplier is essential.

TipsMake is proud to be the official supplier of many different camera brands. For many years, TipsMake has been one of the leading suppliers of modern camera and memory card products in the Vietnamese market. Here, we provide cameras with a variety of models, brands and prices. Coming to TipsMake, you will definitely be able to choose a camera that suits your criteria. In addition, when using cameras here, you will enjoy the most thoughtful warranty and after-sales service.



*Buy genuine products to avoid camera error not recognizing memory card*

## **Choose to buy genuine memory cards that are compatible with your camera.**

When installing and using cameras, customers should invest in buying genuine memory cards. Some specialized, popular memory card lines from major brands such as: Hikvision, SanDisk, TeamGroup, . will be the choice that makes you feel secure and satisfied with the quality and durability of the product.

## **Clean the camera regularly**

Use a small brush or soft cloth to clean the camera and connection ports.

## **Reformat the memory card and update the software periodically**

If the memory card has ever encountered formatting or error problems, reformat the memory card to a format supported by the camera.

Regularly check for the latest firmware updates for your camera. Updates improve compatibility and fix some camera errors.

## **Fix Yoosee Camera not recognizing memory card**

Yoosee is a cheap camera brand that is of interest to many people in the market today. The error that **the Yoosee camera does not recognize the memory card** is a fairly common problem, mainly due to the memory card being selective or the camera quality is not guaranteed. To fix this, you can try some of the following methods:

1. Format the memory card.
2. Replace with another memory card.
3. Find a camera from a larger and more reputable brand such as Hikvision, DAHUA, VANTECH,. at HACOM. Large and reputable camera brands will bring peace of mind to users and make you no longer have to worry about the Yoosee camera not accepting the memory card.



*Good brand products will rarely have the problem of the camera not recognizing the memory card.*

## **Fix Ezviz Camera not recognizing memory card**

In case the **Ezviz camera does not recognize the memory card** , you can try some of the following fixes:

1. Clean the card reader slot and memory card reader.
2. Reformat the memory card as required by the manufacturer.
3. Check that the memory card is the correct compatible type. Inserting the wrong type of memory card may cause the Ezviz camera to not recognize the memory card.
4. Replace another memory card to see if that fixes the problem of Ezviz not recognizing the memory card.
5. Contact TipsMake hotline number 1900 1903 to receive assistance from HACOM's team of technicians, guaranteed to help you completely fix the problem of **Ezviz camera not recognizing memory card** .

### **Conclusion:**

**Camera not recognizing memory card** can cause many difficulties for users in data management. Hopefully, through the above article, TipsMake can help you understand the cause and apply measures to fix errors with your camera and memory card in the most effective way. At the same time, if you want advice on the best genuine camera lines, you can contact TipsMake via website [www.hacom.vn](http://www.hacom.vn) or Hotline 1900 1903!

You finished reading the article "**Causes and how to fix the error of the camera not recognizing the memory card**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.