

Decode in detail the meaning of the air conditioner code, Nagakawa air conditioner

Please decipher the meaning of the air conditioner fault code, Nagakawa air conditioner, to find out the exact remedy for your device.

Many current lines of Nagakawa are capable of detecting errors and notifying users. So what are those errors? TipsMake.com's article 'Declaring the meaning of Nagakawa air conditioning and air conditioner codes' helps you better understand this issue.

content

1. Code of air conditioner error Nagakawa
2. How to fix the fault codes F6 and F8 Nagakawa
 1. F6 air conditioner Nagakawa
 2. Nagakawa F8 air conditioner error

Code of air conditioner error Nagakawa

Air conditioner

Error name

Report Nagakawa air conditioner error code on the lamp

Power light

Run lights

Sleep lights

Timer light

95 and 125 AV models

Copper sensor error

Flicker

Flicker

Flicker

Error of room temperature sensor

Flicker

Flicker

Always bright

External machines work abnormally

Flicker

Turn off

Flicker

Unusual indoor unit fan

Flicker

Always bright

Flicker

95 and 123 AV series

Unusual copper or external sensor error

Flashing 5 times, after 10 seconds of repeating

Turn off

Turn off

Error of room temperature sensor

Twice twice, after 10 seconds of repeat

Turn off

Turn off

Unusual indoor unit fan

Flashing 6 times, after 7 seconds repeat

Turn off

Turn off

182 SH series

Unusual copper or external sensor error

Flashing 5 times, after 7 seconds repeat

Turn off

Turn off

Error of room temperature sensor

Twice twice, after 10 seconds of repeat

Turn off

Turn off

Error of abnormal indoor unit fan

Flashing 3 times after 5 seconds repeated.

Turn off

Turn off

Series 183 AV

Unusual copper or external sensor error

Always bright

Flashing 5 times, after 5 seconds repeat

Turn off

Turn off

Error of room temperature sensor

Always bright

Twice twice, after 10 seconds of repeat

Turn off

Turn off

Error of abnormal indoor unit fan

Always bright

Flashing 6 times, after 2 seconds repeat.

Turn off

Turn off

243 AV series

Copper sensor error

Always bright

Twice twice, after 10 seconds of repeat.

Always bright

Error of room temperature sensor

Always bright

Turn off

Unexpected external machine error

Always bright

Blinks 6 times, after the second repeat.

Turn off

Error of abnormal indoor unit fan

Always bright

Flashing 5 times, after 5 seconds repeat.

Turn off

Series> 246 AT (cassette)

Unusual copper or external sensor error.

Always bright

Flashing 6 times, after 7 seconds repeat

Turn off

Error of abnormal indoor unit fan.

Always bright

Flashing 5 times, repeat after 3 seconds

Turn off

Error in phase reversal, wrong power

Flicker

Flicker

Turn off

Series 424 AP (ceiling pressure)

Unusual copper or external sensor error.

Turn off

Flashing 5 times, repeat after 5 seconds

Turn off

Error of abnormal indoor unit fan.

Turn off

Flashing 6 times, repeat after 7 seconds

Turn off

Error in phase reversal, wrong power

Turn off

Flashing continuously

Turn off

Series 92, 122 SH and 240, 420 AV

Copper sensor error or gas loss

The light shows the EF error

Error of abnormal indoor unit fan

The light shows the EF error

Weak electrical fault, phase difference, poor contact

The lamp shows the Er error

Error in phase reversal or wrong power

Lights> shows E3 and Er errors

How to fix the fault codes F6 and F8 Nagakawa

F6 air conditioner Nagakawa

If your Nagakawa air conditioner reports an F6 error, it means the fan is not running or there is no signal from the fan to the board. To fix it, you first need to check if the indoor unit fan is working, otherwise check the fan capacitor. In case the capacitor works well, the fan is good, it is necessary to check the circuit to see if it supplies power to the fan.

Nagakawa F8 air conditioner error

Air conditioner Nagakawa reported F6 error which means the pump of the machine does not work. This error is usually found only in air-conditioner models. You need to check if the pump is broken. If it is damaged, it must be replaced, not broken, it must check the signal provided to power the pump.

Don't forget to save the air conditioner error code, air conditioner Nagakawa to use in case your device has trouble. Visit META.vn for more useful information about air conditioning.

>>> **Maybe you care:**

1. Air conditioner, LG air conditioner has any error codes? What is the cause?
2. Midea means the most common air conditioning and air conditioning codes
3. Learn the most common Mitsubishi air conditioner fault codes
4. [Summary] Causes and ways to fix error codes Air conditioner, Gree air conditioner
5. Detailed summary of common error and trouble codes in air-conditioners and air conditioners Sharp
6. Instructions for reading code of air conditioner, Casper air conditioner for quickest repair
7. Air conditioner error code, Funiki air conditioner and common error handling

You finished reading the article "**Decode in detail the meaning of the air conditioner code, Nagakawa air conditioner**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.