

Fix some common errors on Toshiba TV

If your Toshiba TV has a few errors, before calling the service center for assistance, try the remedies that we list in the following article

It is inevitable to encounter some problems when using appliances. In the past, we told you ways to fix your washing machine at home when you get stuck, or LG, Sanyo, Toshiba washing machine error codes to confirm the types of errors easier and find ways to fix them.

And in this article, we will show you how to fix some common errors, which are common on Toshiba TVs. Before calling the service center for assistance, try fixing the TV when you encounter the following errors.

1. Cannot open Toshiba TV:

How to fix:

1. Check if the power plug is plugged in, then press the power button on the remote Toshiba TV.
2. The battery in the Control Box may be exhausted. Therefore, you can replace the new battery for the control of Toshiba TV, and then press the POWER button to start the TV.



2. No picture, no sound:

How to fix:

1. Check the antenna cable again.
2. Maybe Toshiba TV does not enter the source. You can check fuses, sockets, and wires for problems.

3. No sound, normal picture:

How to fix:

1. The sound may be interrupted. Press the volume up / down button to adjust the volume for Toshiba TV.
2. Maybe the radio has trouble. You can try to choose another TV channel for Toshiba TV.
3. In the Sound Settings section, set the speakers and speakers to the TV set to output sound. Because if you install the TV to output sound to the sound system (staging), the TV speaker will not make sound, even if the volume control of the TV.



4. No sound, normal picture:

How to fix:

1. Keep the antenna cable away from other connecting cables to avoid interference with audio signals on Toshiba TVs.
2. Maybe the radio has trouble. You can try to choose another TV channel for Toshiba TV.

5. Bad, normal language:

How to fix:

1. Check the antenna cable again. Keep the antenna cable away from other connecting cables to avoid video signal interference on Toshiba TVs.
2. Maybe the radio has trouble. You can try to choose another TV channel for Toshiba TV.
3. You can adjust the image features in Picture **settings** on Toshiba TV.

6. Bad signal:

How to fix:

1. Check the antenna cable again.

2. Maybe the radio has trouble. You can try to choose another TV channel for Toshiba TV.
3. Reselect the color system correctly.

7. Teletext-related phenomena:

How to fix:

1. Check the antenna wire again for viewing Teletext, the signal received from the antenna must be good.

8. Some pixels on the screen are not bright:

Flat-panel displays on Toshiba TVs are manufactured with very high-precision technology, but there may be some effects on the screen that are not bright or bright. This is not an unusual phenomenon to fix.

9. The brightness of the image changes when the phone is turned on:

When the device is turned on at low temperatures (0 degrees C or below), the brightness of the image changes until the screen is warmed up. Therefore, this is not a phenomenon of broken TV.

10. Image with shadow:

How to fix:

1. Maybe the radio has trouble. You can try to choose another TV channel for Toshiba TV.
2. The antenna may be of poor quality, so you should use a high-orientation antenna.
3. Check if the direction of the antenna is removed. If yes, adjust the antenna direction.



11. Bad or colorless colors:

How to fix:

1. Maybe the radio has trouble.You can try to choose another TV channel for Toshiba TV.
2. Adjust the color or tone in the image menu on Toshiba TVs.

12. Remote control remote does not work:

How to fix:

1. Do not leave obstacles between Toshiba TV remote control.
2. It is possible that the battery in the remote control has expired.Replace the battery for remote Toshiba TV.
3. Fluorescent lamps may affect the operation of the remote control;Try turning off the fluorescent light.



13. If you forget the pin code:

How to fix:

1. Please use the master pin (number 1276), then change it to another number as you like.Make sure no one can know to use this master pin code.

Note: If you have tried to fix the above problem without any effect, please contact Toshiba customer support center.

Refer to the following articles:

1. How to connect a laptop to a TV using an HDMI port
1. How to connect mouse, keyboard with Smart TV
1. What are the connection ways to watch videos on TV?

Hope these few posts are useful to you!

You finished reading the article "**Fix some common errors on Toshiba TV**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.

