


Fix Wifi error on Google Pixel

Like other smart phones, in the process of using the device the user cannot avoid errors. One of the most common errors is that the WiFi connection error does not work. In the following article, Network Administrator will guide how to fix this error.

Google Pixel is a new phone from Google that has just been launched not long ago. On Google Pixel, Google integrates more "unique" features such as unlimited storage of images and videos, Smart Storage, Google Assistant, Pixel Launcher, .

However, like other smart phones, in the process of using the device the user cannot avoid errors. One of the most common **errors** is **that the WiFi connection error does not work** . In the following article, Network Administrator will guide how to fix this error.

Fix Wifi error on Google Pixel

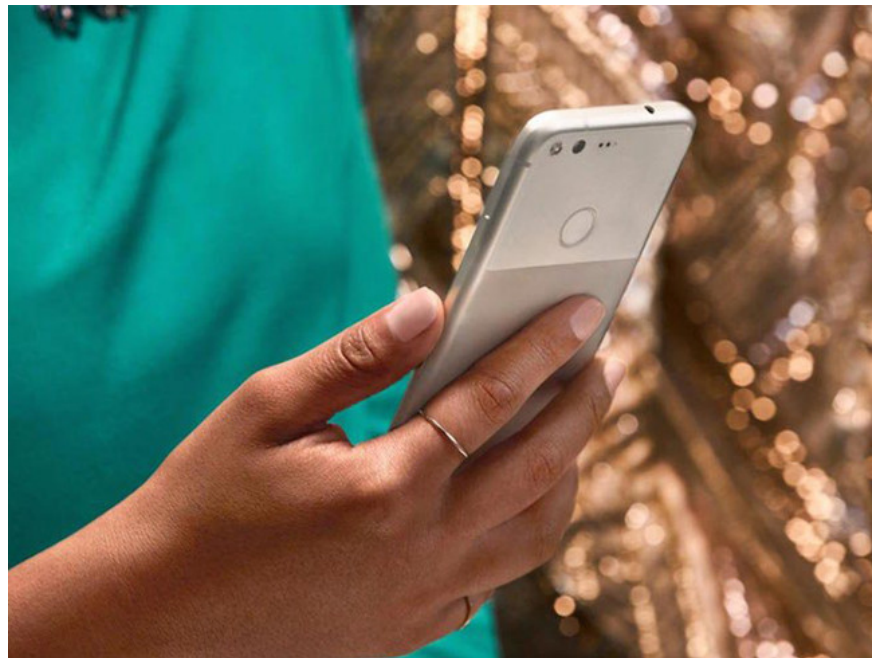

1. Turn off Wifi and airplane mode

The simplest and most effective solution to fix Wifi error on Google Pixel phone is to **turn off Wifi then proceed to reopen Wifi** again.

If the Wifi error persists, you can **switch to open flight mode** , then wait about 30 minutes then turn off the airplane mode and check for errors.

2. Restart Google Pixel

The next solution to fix Wifi error on Google Pixel is to **restart the device and wait until the Wifi connection is established** . Then check whether Wifi is working or not.

3. Check Power Saving Mode

It is possible when you enable the **Power Saving** feature and you forget to **remove the Wifi restrictions** , and this is the reason why Wifi will not work.

Access Settings, then click **Battery => Power Saving Mode** . Find and change the **Data restrictions** status to **OFF** (if the initial state is ON).

Finally check if Wifi error is still there.

4. Forgot network then reconnect

Some users reflect that after they forget to connect to Wifi, then reconnecting to Wifi also fix Wifi error on Google Pixel phone.

Note : In this way you need to remember the Wifi connection password.

First access the **Settings Menu** on your Pixel phone, then click to select **Wifi** . Now you will see the Wifi name you are trying to connect to. **Click and hold** the Wi-Fi network name on that connection, then select **Forget network** (forget the network).

Next turn off Wifi and wait about 5 seconds, then proceed to reopen Wifi. Click the Wifi name you want to connect, then enter the password to connect and check if the error is still there.

5. Check Wifi Timer

Google Pixel is integrated Wifi Timer to support turning off Wifi after a certain period of time. To check whether **Wifi Timer** on your phone is enabled or disabled, access the **Settings Menu => Open Wifi** . Next, select the **Menu key (i-shaped icon) => Advanced** . Find Wifi Timer and switch the status to **OFF** if the initial state of the option is ON.

6. Check the date and time settings

Wrong date and time settings can cause the Wifi connection error on Google Pixel phones. So to fix the error you try to check if the date and time settings on your Pixel phone are correct.

If the date and time setting is wrong, proceed to reset correctly and try connecting again to see if the error still occurs.

Refer to some of the following articles:

1. Automatic timer to turn on Wifi after 1 hour, 4 hours or 1 day on Windows 10
1. This is a way to prevent hackers from stealing your data when using public Wifi
1. Complete how to fix Wifi error on iOS 10

Good luck!

You finished reading the article "**Fix Wifi error on Google Pixel**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.