

Four simple steps to sing karaoke with SoundMax M-1 portable speakers

You own a SoundMax M-1 mobile karaoke speaker but don't know how to connect buetooth with phone to sing karaoke? Only 4 simple steps can satisfy your singing interest anytime, anywhere.

You own a SoundMax M-1 mobile karaoke speaker but don't know how to connect buetooth with phone to sing karaoke? if only for listening to music, it is a waste of outstanding features of this portable speaker, right? Only 4 simple steps can satisfy your singing interest anytime, anywhere.

Steps to connect bluetooth of SoundMax M-1 mobile speaker

Step 1: Turn on the SoundMax M-1 speaker power switch

Check the position of the power button and turn on to see if SoundMax M-1 karaoke speaker screen is bright or not, this is also a way to check the battery level of the speaker and the default input source of the sound is stable.



Press the ON button to turn on the power on the SoundMax M-1 speaker.

Step 2: Open bluetooth mode of SoundMax M-1

If you press the MODE button on the control panel, if you see the LED screen of SoundMax karaoke speaker M-1 displaying the red text 'BLUE' and the bluetooth symbol blinking then you can connect successfully when connecting. the symbol will stop flashing.



SoundMax M-1 bluetooth mode has been opened.

Step 3: Open the smartphone bluetooth mode

You open the bluetooth connection mode of the phone at the same time by going to settings and then searching for bluetooth mode and switching to ON mode.



Open bluetooth mode on the phone.

Step 4: Connect the bluetooth of the two devices together

Detect bluetooth paired device by pressing connect to device named "SoundMax M1". So, after connecting to bluetooth, you can now sing karaoke with your favorite songs.



And now let's sing together.

Adjust the Volume of the SoundMax M-1 speaker and microphone

For great sound quality, you need to know how to master your SoundMax M1 suitcase speaker. The parameters that are rated the most so that the sound is not too loud but the loudest and most obvious is the volume control button does not exceed 80%, if the maximum overall power adjustment can be quickly damaged. Microphone volume is about 50%, 40% is good. With SoundMax M-1 speaker, you also get professional karaoke but you have to learn more details about how to adjust parameters accordingly.

After 4 steps of guiding to connect the SoundMax M-1 candy speaker with the phone to sing karaoke, you can show off your voice everywhere, from small street entertainment to travel or party trips. crowded outside the beach.

Buy now SoundMax M-1 mobile karaoke speakers here: <https://meta.vn/loa-soundmax-m-1-p45500>

See more:

What is the hot SoundMax M-1 speaker that young people are crazy about?

You finished reading the article "**Four simple steps to sing karaoke with SoundMax M-1 portable speakers**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.