

# Here's what the buttons on your iPhone can actually do!

In the article below, TipsMake.com will summarize the location and usage of basic buttons on iPhone models from old to new.

You may be familiar with some of the functions that the physical buttons on your iPhone can perform, like taking a screenshot or opening the power menu, but that's not all. From controlling the camera to instantly accessing accessibility features, there's a lot you can do without touching the screen.

1. How to use iPhones without a Home button

## 7. The Basics


The side button on your iPhone isn't just for locking or waking the screen. Pressing and holding it will activate Siri. This is handy when you don't want to say "Hey Siri" or are in a noisy place. Now that Siri is integrated with ChatGPT , you can get AI-powered answers without opening any apps.

By default, the volume up and down buttons on the left side control music volume. However, when you're not playing music, you can set them to adjust your ringer volume. To change this, go to **Settings > Sounds & Haptics** and turn on **Change with Buttons** .


09:43


58%

## Cài đặt

 Màn hình chính & Thư viện ứng dụng >

 Siri >

 Tìm kiếm >


 Trung tâm điều khiển >

 Thông báo >


 Âm thanh & Cảm ứng >


 Tập trung >

 Thời gian sử dụng >

 Face ID & Mật mã >

 SOS khẩn cấp >

 Quyền riêng tư & Bảo mật >

 Game Center >

 iCloud >

 
 Apple TV >

09:45

📶 59%

< Cài đặt Âm thanh & Cảm ứng

NHẠC CHUÔNG VÀ CẢNH BÁO



Thay đổi bằng nút



Cảm ứng

Luôn phát >

Các nút âm lượng có thể được sử dụng để điều chỉnh âm lượng của nhạc chuông và cảnh báo.

Nhạc chuông

Thông báo >

Âm báo tin nhắn

Nốt nhạc >

Thư thoại mới

Giọt nước >

Thư mới

Không có >

Thư đã gửi

Xoáy nước >

Cảnh báo lịch

Đàn dây >

Cảnh báo Lời nhắc

Đàn dây >

Cảnh báo mặc định

Bật nảy >

Phản hồi bàn phím

Âm thanh >

09:46

60%

Chuông



 
Gợi ý




Đã thêm gần đây




Xã hội

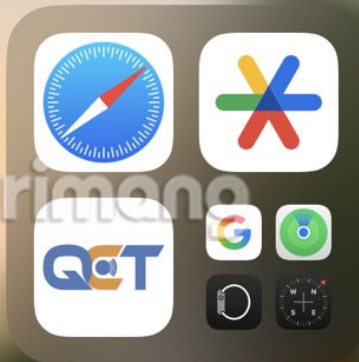



Tiện ích

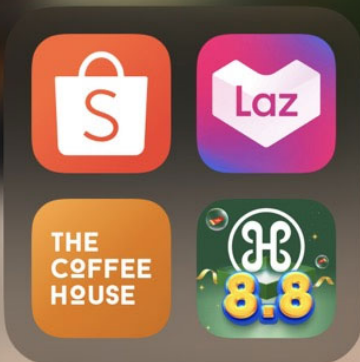 

Mua sắm & Đồ ăn

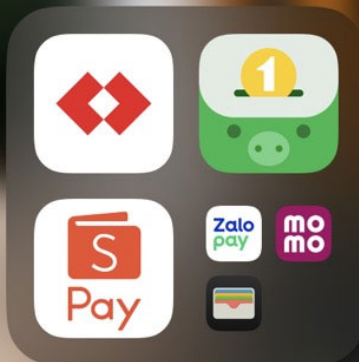 

Tài chính

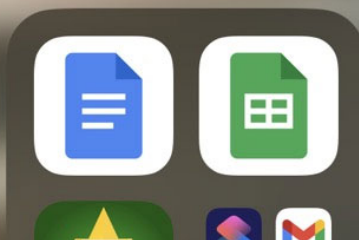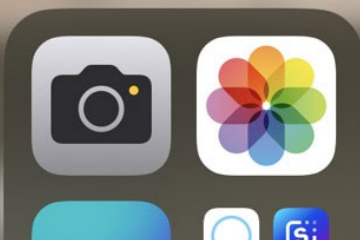  

Pressing the volume up button along with the side button will take a screenshot. But if you press and hold this combination, the power menu will appear, from which you can turn off your iPhone . This feature also works if you press and hold the volume down button.

## 6. Camera Control

If you have one of the latest iPhone 16 models , you'll also get a dedicated Camera Control button right below the side button. A single press will launch the Camera app instantly, so you don't have to hunt for it.

When you enter the Camera app, the Camera Control button turns into a convenient shutter button. This lets you take photos without having to tap the on-screen shutter button. You can also swipe up or down on the button to smoothly switch between zoom levels or switch to the front camera for selfies.

Pressing and holding the Camera Control button launches Visual Intelligence, turning your iPhone into a smart assistant. You can then point the camera at a restaurant to see more information, identify plants and animals, or even translate text instantly.

There are also a few other things you can do with the Camera Control button. For example, go to **Settings > Camera > Camera Control** to change which app opens the shortcut. If you prefer to use a third-party camera app like Snapchat or ProCamera, install that app and it will appear in the list. Additionally, under **Accessibility** in the same menu, you can adjust the button's pressure sensitivity to your liking.

10:09

📶 🔒 44

## Cài đặt

 Cài đặt chung >

 Trợ năng >


 Apple Intelligence & Siri >

 Camera >

 Chế độ chờ >

 Hình nền >

 Màn hình & Độ sáng >

 Màn hình chính & Thư viện ứng dụng >

 Nút Tác vụ >

 Tìm kiếm >

 Trung tâm điều khiển >

 Thông báo >

 Âm thanh & Cảm ứng >

 Tập trung >

 Thời gian sử dụng >

 Face ID & Mật mã >

## CÀI ĐẶT HỆ THỐNG

[Điều khiển camera](#) [Camera >](#)

Bấm vào Điều khiển camera để mở ứng dụng camera, sau đó bấm lần nữa để sử dụng Điều khiển camera làm nút chụp. Nhấn nhẹ để điều chỉnh. [Tìm hiểu thêm.](#)

## CÀI ĐẶT ỨNG DỤNG

[Phong cách nhiếp ảnh](#) [Tiêu chuẩn >](#)

Phong cách nhiếp ảnh sử dụng khả năng nhận biết cảnh nâng cao để điều chỉnh một số màu sắc ở các phần khác nhau của ảnh. Cá nhân hóa màu da với độ tinh tế đáng kinh ngạc để có diện mạo đúng như ý.

[Quay Video](#) [1080p tại 30 fps >](#)[Quay chậm](#) [1080p tại 240 fps >](#)[Quay video Điện ảnh](#) [1080p tại 30 f... >](#)[Ghi âm thanh](#) [Âm thanh không gian >](#)[Định dạng](#) [>](#)[Bảo lưu cài đặt](#) [>](#)

Dùng nút **Tăng âm lượng để chụp liên tục**

10:12

43

[Quay lại](#)

Trợ năng

Điều khiển camera



Bấm vào Điều khiển camera để mở ứng dụng camera, sau đó bấm lần nữa để sử dụng Điều khiển camera làm nút chụp. Nhấn nhẹ để điều chỉnh. [Tìm hiểu thêm](#)

CỬ CHỈ ĐIỀU KHIỂN

Nhấn nhẹ



Vuốt



Nhấn nhẹ Điều khiển camera hoặc thực hiện cử chỉ vuốt dài để truy cập các điều khiển bổ sung.

 
LỰC NHẤN NHẸ

Nhẹ hơn

Mặc định



Mạnh hơn

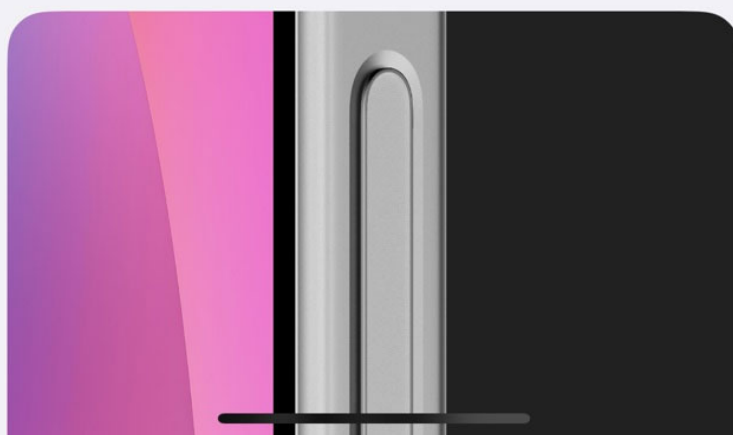

## 5. Access your favorite accessibility features

The Accessibility menu on iPhone is packed with powerful tools that anyone can use, like AssistiveTouch, Live Speech, Reduce White Dot, and more. But you don't have to open that menu every time you want to use your favorite accessibility feature.

You can quickly turn accessibility features on or off by quickly pressing the side button on your iPhone three times. To set them up, go to **Settings > Accessibility > Accessibility Shortcut** , then select the feature you want from the list.

10:21


📶 81%

## Cài đặt

 Bluetooth Không kết nối >

 Di động Tắt >

 Pin >

 Cài đặt chung >


 Trợ năng >


 Camera >


 Chế độ chờ >

 Hình nền >


 Màn hình & Độ sáng >

 Màn hình chính & Thư viện ứng dụng >

 Siri >

 Tìm kiếm >

 Trung tâm điều khiển >

 Thông báo >

10:22

81%

< Cài đặt

Trợ năng



Phụ đề & Chú thích >

LỜI NÓI



Lời nói trực tiếp

Tắt >



Phím tắt giọng nói

Tắt >

PHỤ KIỆN



Bàn phím & Nhập liệu >



Apple TV Remote >

CÀI ĐẶT CHUNG



Truy cập được hướng dẫn

Tắt >



Truy cập được hỗ trợ >



Siri >



Phím tắt trợ năng AssistiveTouch >



Cài đặt theo ứng dụng >


 











10:22

📶 81%

## < Trợ năng Phím tắt trợ năng

     Định cấu hình và sau đó bấm nút sườn ba lần để bật hoặc tắt các tính năng trợ năng.

BẤM NÚT SƯỜN BA LẦN ĐỂ:

  - ✓ AssistiveTouch 
- Âm thanh trong nền 
- Bộ lọc màu 
- Cân bằng trái/phải 
- Đảo ngược cổ điển 
- Đảo ngược thông minh 
- Điều khiển công tắc 
- Điều khiển thiết bị ở gần 
- Đọc màn hình 
- Giảm chuyển động 
- Giảm điểm trắng 
- Giảm độ trong suốt 
- Chỉ báo chuyển động của xe 

For example, if you use Magnifier frequently, select it from the list and you can activate it at any time by simply triple-tapping the side button. Similarly, if AssistiveTouch or Vehicle Motion Cues are features you use every day, you can set the side button to launch those features.

## 4. Apple Pay Payment

While triple-tapping the side button will activate your chosen accessibility feature, a quick double-tap also has another useful function: Apple Pay . When your iPhone is locked, just double-tap the side button to instantly bring up your default payment card.



From there, authenticate with Face ID or your passcode, then hold your iPhone near the payment terminal to complete your transaction quickly and securely. If you have multiple cards set up, swipe left or right to select the card you want before paying.

This shortcut makes transactions seamless and quick, especially when you're on the go or in a hurry. To make sure this feature works on your iPhone, go to **Settings > Wallet & Apple Pay** and turn on the **Double-click side** button toggle .

10:28

📶 84%

## Cài đặt



Trung tâm điều khiển



Thông báo



Âm thanh & Cảm ứng



Tập trung



Thời gian sử dụng



Face ID & Mật mã



SOS khẩn cấp



Quyền riêng tư & Bảo mật



Game Center



iCloud



Ví & Apple Pay



Ứng dụng



10:28

84%

< Cài đặt

Ví & Apple Pay

CHO PHÉP VÍ & APPLE PAY TRUY CẬP



Siri



Tìm kiếm



Thông báo



Biểu ngữ, Âm thanh, Biểu tượng



Hoạt động trực tiếp



THẺ THANH TOÁN



Techcombank Visa Eco

.... 7347



[Thêm thẻ](#)

Bấm nút sườn hai lần



Chuẩn bị sẵn sàng thẻ bất kỳ lúc nào bằng cách bấm nút sườn hai lần.

Ẩn thẻ đã hết hạn



THẺ PHƯƠNG TIỆN CÔNG CỘNG

Thẻ PT công công nhanh

Không >

### 3. Activate emergency SOS

The emergency features on your iPhone are something you hope you never need, but knowing how they work can be crucial in an emergency.

To activate Emergency SOS, press and hold the side button along with the volume up or down button. When the Emergency SOS slider appears on the screen, drag it to immediately call emergency services. This feature works even when your iPhone is locked, so you can use it in any situation.

If you can't see the screen, simply hold the side button and either volume button and your iPhone will automatically call emergency services without you having to slide any buttons.

If the volume buttons aren't working on your iPhone, or if you want a slightly easier option, go to **Settings** > **Emergency SOS** and turn on **Call with 5 Presses** . Once enabled, quickly pressing the side button 5 times will instantly place an emergency call. This way, you'll have the peace of mind that help is just a few taps away.


10:32

86%

## Cài đặt

 Siri >

 Tìm kiếm >


 Trung tâm điều khiển >

 Thông báo >


 Âm thanh & Cảm ứng >


 Tập trung >

 Thời gian sử dụng >


 Face ID & Mật mã >

 SOS khẩn cấp >

 Quyền riêng tư & Bảo mật >

 Game Center >

 iCloud >

 
 Ví & Apple Pay >

10:33

86%

< Cài đặt

## SOS khẩn cấp

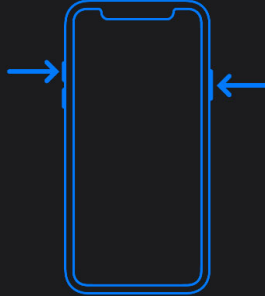

Nhấn và giữ nút sườn và một trong hai nút âm lượng để thực hiện cuộc gọi khẩn cấp. Tại các vùng nhất định, có thể bạn cần chỉ định dịch vụ khẩn cấp sẽ gọi. Tính năng Tự động gọi yêu cầu thẻ SIM.

Gọi bằng cách giữ và thả



Nếu bạn giữ liên tục nút sườn và một trong hai nút âm lượng thì quá trình đếm ngược sẽ bắt đầu và âm thanh cảnh báo sẽ phát. Sau khi đếm ngược, nếu bạn thả các nút ra thì iPhone sẽ gọi các dịch vụ khẩn cấp.

Gọi bằng cách nhấn nút 5 lần



Nếu bạn nhấn nhanh nút sườn năm lần thì quá trình đếm ngược sẽ bắt đầu và âm thanh cảnh báo sẽ phát. Khi đếm ngược kết thúc, iPhone sẽ gọi các dịch vụ khẩn cấp.

Gọi trong yên lặng



Âm thanh cảnh báo, đèn flash và âm thanh VoiceOver sẽ được tắt tiếng khi sử dụng "Giữ và

10:33

86%

# SOS khẩn cấp



iPhone sẽ gọi các dịch vụ khẩn cấp khi đếm ngược kết thúc.



**SOS**

Cuộc gọi khẩn cấp



Dừng

## 2. Customize Action button

On the latest iPhone models, the Action button replaces the classic mute button and offers much more flexibility. It sits where the mute button used to be and can be set to perform a variety of useful tasks, such as starting a voice memo, turning on the flashlight, recognizing music, and more.

By default, pressing and holding the Action button switches between Silent and Ring mode. To change, go to **Settings > Action Button** .

10:18

📶 🔋 43

## Cài đặt

-  Cài đặt chung >
  -  Trợ năng >
  -  Apple Intelligence & Siri >
  -  Camera >
  -  Chế độ chờ >
  -  Hình nền >
  -  Màn hình & Độ sáng >
  -  Màn hình chính & Thư viện ứng dụng >
  -  Nút Tác vụ >
  -  Tìm kiếm >
  -  Trung tâm điều khiển >
- 
-  Thông báo >
  -  Âm thanh & Cảm ứng >
  -  Tập trung >
  -  Thời gian sử dụng >
- 
-  Face ID & Mật mã >
  -  SOS khẩn cấp >

10:18

43

< Cài đặt



Quantrimang



## Đèn pin

Bật ánh sáng bổ sung khi bạn cần.

10:18

43

< Cài đặt



Quantrimang



## Phím tắt

Mở một ứng dụng hoặc chạy phím tắt ưa thích của bạn.

Chọn một phím tắt...

There are a variety of options to choose from, including Voice Memos, Controls, Flashlight, Translate, and Magnifier. For options like Focus, Camera, Controls, Shortcuts, or Accessibility, you can fine-tune exactly what happens when you press or hold a button.

For example, you can specify which Focus mode to enable or which camera mode to open when you hold the button. And if you don't want the button to do anything, there's an option to set it to **No Action** .

If you're using the Shortcuts app to automate everyday tasks, you can even use the Actions button to launch any shortcuts you've created. That means you can start a playlist, set a timer, or send a quick message with just a tap.

## 1. Force restart iPhone

Restarting your iPhone is a classic fix for many temporary issues. Normally, you can press and hold either volume button along with the side button to bring up the power menu. But if your phone is completely frozen and unresponsive, that's not a viable option.

When that happens, a forced restart can save the day. Press and quickly release the volume up button, then press and quickly release the volume down button. Then, press and hold the side button until the Apple logo appears on the screen. When the logo appears, release the button and the phone will restart.



This method is perfect for dealing with unresponsive screens or stubborn apps that won't close. It's usually the first fix you should try before moving on to more complicated fixes like factory resetting your iPhone .

Getting to know the buttons on your iPhone can make certain tasks a lot easier. Depending on your iPhone model, you may not be able to use all of these tips, but you'll definitely discover new ways to speed up everyday tasks.

You finished reading the article "**Here's what the buttons on your iPhone can actually do!**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.