

# How to change WiFi Archer C9 password, replace pass WiFi TP Link Archer C9 simple

You are using the Archer C9 WiFi transmitter but do not know how to change the wifi password, so follow these four simple steps to quickly change the WiFi pass without resorting to the technical experts.

You are using the Archer C9 WiFi transmitter - one of TP Link's high-end wifi transmitters, but don't know how to change the wifi password. This is understandable because the Archer C9 uses the new interface of TP Link, so the password change operations are not the same as the popular TP Link modem lines.

A technician is needed now, but instead of relying on them, you can solve the problem yourself simply. Moreover, this also saves time because the technical call is not sure they have appeared immediately, sometimes you have to wait a few hours or even the whole day. The best option in this situation is to become a temporary technical expert and TipsMake.com will guide you how to change the simple Archer C9 wifi password at home. Let's take a look and start working.

1. How to change WiFi password modem HuaWei VNPT like?
2. How to change WiFi DLink password for network operators
3. Instructions for changing Yes Telecom VNPT WiFi password

## Steps to change wifi password Archer C9 , install wifi pass tplink Archer C9

**Step 1:** Please access the modem settings page by entering the address: **192.168.1.1** in the URL bar of the browser browser any CocCoc, Chrome, . are.

Then you need to enter **User** and **Password** to access Archer C9 wifi, usually it will be:

**User:** admin

 
**Password:** admin

Next, select **Login** to login and proceed to change wifi password Archer C9.

From the WiFi Archer C9 management interface, click on **Wireless** to start editing WiFi settings.




**Step 2:** You will see the **Password** section of the **2.4Ghz** and **5Ghz** frequency bands , set the password for these two bands. After you have entered the wifi password as you wish, please scroll down to the bottom and select **Save** button to save.

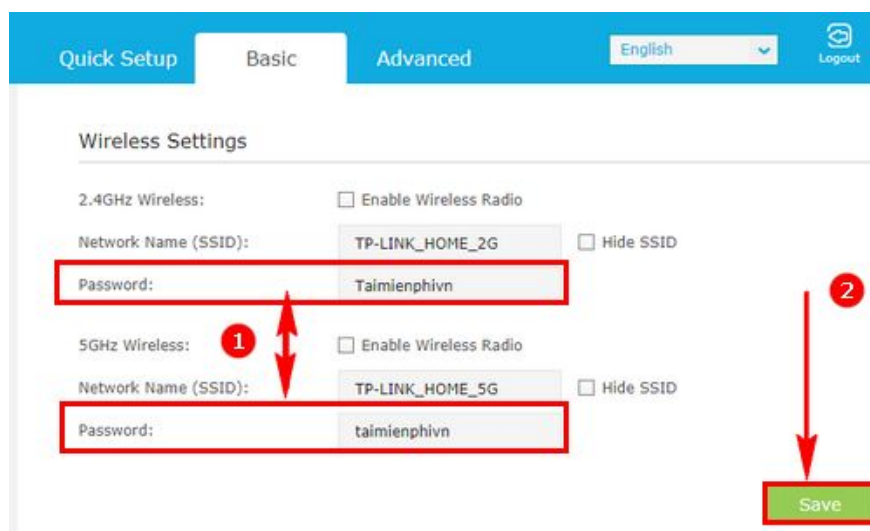


**Step 3:** Restart the Archer C9 wifi modem by selecting the Reboot button in the right corner of the Archer C9 interface.



 Select Yes to start rebooting.

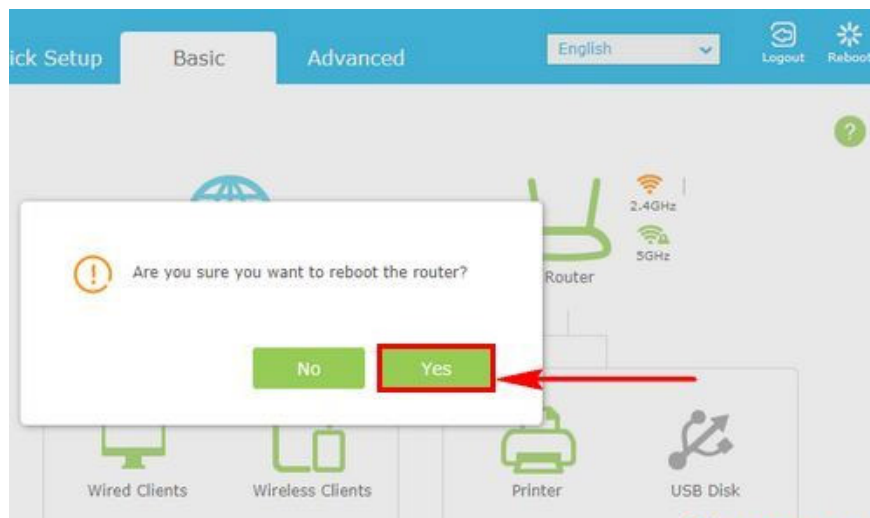

 Wait a moment for the Archer C9 modem to restart.

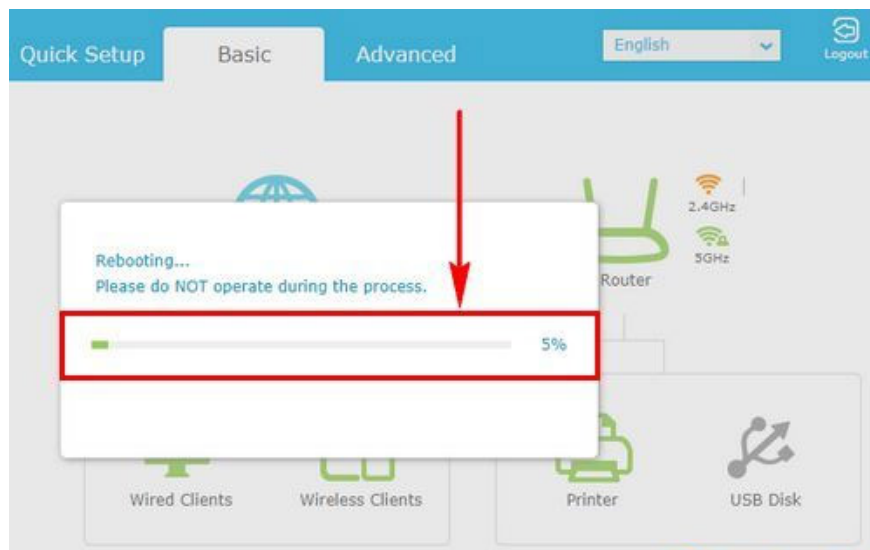

So you have completed the role of a technician already. Changing the wifi pass Archer C9 is relatively easy but not everyone knows how to do it, from now on you only need to follow these four simple steps to change the password Tplink Archer C9 quickly and easily without Ask a technician to come home.

Good luck!

See more:

1. Instructions for changing WiFi iGate VNPT password
2. The best wifi transmitter, wifi modem, worth buying for you

You finished reading the article "**How to change WiFi Archer C9 password, replace pass WiFi TP Link Archer C9 simple**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.