

# How to Connect New Remote to Firestick

TipsMake today will show you how to pair your new remote control with Amazon Firestick. You can easily pair your Amazon remote with your Amazon Firestick by holding down the Home button on the remote. Or if your TV supports HDMI Consumer Electronics Control (HDMI-CEC), you can also connect an HDMI-CEC compatible remote control by enabling the HDMI-CEC feature in the TV settings.

## Pair the new Firestick remote



**Connect Firestick to TV.** You can connect the Firestick to the TV through the empty HDMI port on the back of the TV.



**Turn on the TV.** Press the power button on the front of the TV or on the remote to turn on the TV.



**Select the Amazon Firestick's HDMI source.** Press the Source button on the TV remote until you select the HDMI port that the Firestick is connected to. The Amazon Fire screen will appear.



**Press and hold the Home button on the remote control.** The Home button has a house symbol, located below the circular pad at the top of the remote. Press and hold the Home key for 10 seconds. When the remote control connects to the Firestick, the message "New Remote Connected" will appear on the screen.

If it doesn't work the first time, you can release the Home button and try again. Try moving closer or further away from the Firestick.

### **Use TV remote with HDMI-CEC**



**Connect Firestick to TV.** You can connect the Firestick to the TV through the empty HDMI port on the back of the TV.



**Turn on the TV.** Press the power button on the front of the TV or on the remote to turn on the TV.



**Select the Amazon Firestick's HDMI source.** Press the Source button on the TV remote until you select the HDMI port that the Firestick is connected to. The Amazon Fire screen will appear.



**Go to System Settings on the TV.** How to open system settings will vary depending on the TV model. On some TVs, you'll press the "Menu" button on the remote. With some other TVs, you may need to press the Home button and then select Settings or Options.



**Find the HDMI-CEC setting.** Again, this option will be different for each TV model. In some cases, this option may be in Input Settings, System Settings, or similar. Besides, each TV brand has a different commercial name for the HDMI-CEC feature. The following is a list of TV brands and trade names of the associated HDMI-CEC standard.

**AOC:** E-link

**Hitachi:** HDMI-CEC

**LG:** SimpLink

**Mitsubishi:** Net Command for HDMI

**Onkyo:** Remote Interactive over HDMI (RIHD)

**Panasonic:** HDAVI Control, EZ-Sync or VIERA Link

**Philips:** Easy Link

**Pioneer:** Kuro Link

**Runco International:** RuncoLink


**Samsung:** Anynet+

**Sharp:** Aquos Link

**Sony:** BRAVIA Sync, Control for HDMI

**Toshiba:** CE-Link or Regza Link

**Vizio:** CEC

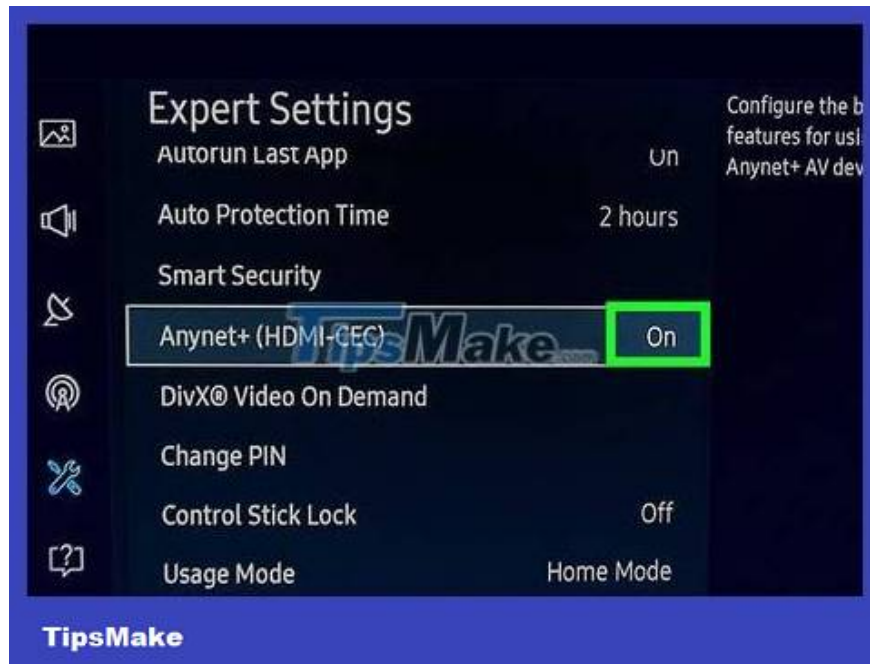

**Enable HDMI-CEC.** Once you find the corresponding setting in your TV's menu, turn on HDMI-CEC. Most TVs usually turn this feature off by default. Once activated, you can use the TV remote to control many devices, including Amazon Firestick or even PlayStation 4.

You finished reading the article "**How to Connect New Remote to Firestick**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.

