

How to fix common errors on Canon inkjet printers

In this article discussing the causes and how to fix common errors encountered on Canon printers, Click the article to see now!

In the process of using the printer, it is inevitable that errors arise, this can affect your work, slow work progress, . This article TipsMake will show you how to fix the problem. some common errors on Canon printers .

1. The printer is out of paper

- There is no paper in the rear tray.
- Paper is not loaded in the rear tray correctly.

Picture 1 of How to fix common errors on Canon inkjet printers

How to fix

Follow the steps below:

- Load paper in the rear tray.
- Align the paper guides with both sides of the paper when you load paper in the rear tray.

After implementing these measures, the nut **Black** (Black) or **Mau** (Color) printer.

Note : To cancel printing, press the **Stop** button on the printer.

2. Paper is jammed

Paper is jammed in **the output slot** or in the **rear tray** .

Picture 2 of How to fix common errors on Canon inkjet printers

How to fix

If paper is jammed in the output slot or in the rear tray, remove the jammed paper from the output slot or from the rear tray according to the **instructions** below.

Step 1 : Pull the paper out slowly, either from the output slot or from the rear tray, whichever is easier. Hold the paper with both hands, and then pull the paper out slowly so as not to tear it.

Picture 3 of How to fix common errors on Canon inkjet printers

- If you cannot pull the paper out, turn the printer back on without trying to pull it out. Paper can be ejected automatically.
- If the paper jammed during printing and you need to turn off the printer to remove the paper, press the **Stop** button to stop printing before turning off the printer.
- If the paper tears and you cannot remove the jammed paper from the output slot or the rear tray, remove it from inside the printer.

Step 2 : Reload paper and press the **Black** button or the **Color** button on the printer.

- The printer continues to print. Reprint the page you are printing on if the page did not print correctly due to a jam.
- If the above measures do not solve the problem, contact the nearest Canon service center to request repair.

3. The cartridge is not installed correctly

Due to incorrect print cartridge installation .

Picture 4 of How to fix common errors on Canon inkjet printers

How to fix

- Open the scanner / cover, and then push the cartridge lock cover to make sure that the cartridge is installed correctly.
- Push the hinge button until it clicks into place.
- Make sure that the cartridge orange label and protective tape is removed for installation.

Picture 5 of How to fix common errors on Canon inkjet printers

4. Cartridge cannot be recognized

The printhead may be damaged, cartridges cannot be recognized.

Picture 6 of How to fix common errors on Canon inkjet printers

How to fix

- Turn off the printer and turn it on again.

- If you still cannot solve the problem, please contact your nearest Canon service center to request a repair.

5. The ink absorber is almost full

How to fix

- Press the **Black** or **Color button** on the printer to continue printing. Then contact the nearest Canon service center to request a repair.

- **Note** : In case an alarm or error occurs due to remaining ink, the printer cannot print or scan.

So, through this article, I have shown you how to fix some common errors on Canon printers. Thanks for watching.

You finished reading the article "**How to fix common errors on Canon inkjet printers**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.