

How to fix crashed Camera or black screen on iPhone

If you see an entire black color on the Camera screen or the iPhone's Camera app is stalled, follow the article below.

If you are a phone photographer, the iPhone Camera will definitely be your most used application. But if on a good day, your iPhone Camera failed to work, it seems to be a disastrous day for your beautiful life. However, do not worry, the article below will help you fix the iPhone Camera crash or black screen.

If you see an entire black on the Camera screen or your Camera app is stalled, follow these steps:

1. Find out where the problem is

If you have problems with your iPhone Camera, the first thing to do is to find out if it is a software error or hardware.



1. Try calling Facetime or use other video calling applications for a friend.




1. Check both front and rear cameras. If it still works normally it is due to a software error and you can easily fix this.

In the case that you continue to see the black screen on Camera app when Facetime is best, you should not waste time struggling and bring it right away to the store to help experts overcome this problem. friend.

2. Turn off the Camera app completely on iPhone


After the error is determined by the software, turn off the Camera app completely. Press the Home key 2 times in a row. You will see a screen that shows you recently used applications that are not turned off. Find the Camera app and surf up to turn it off.

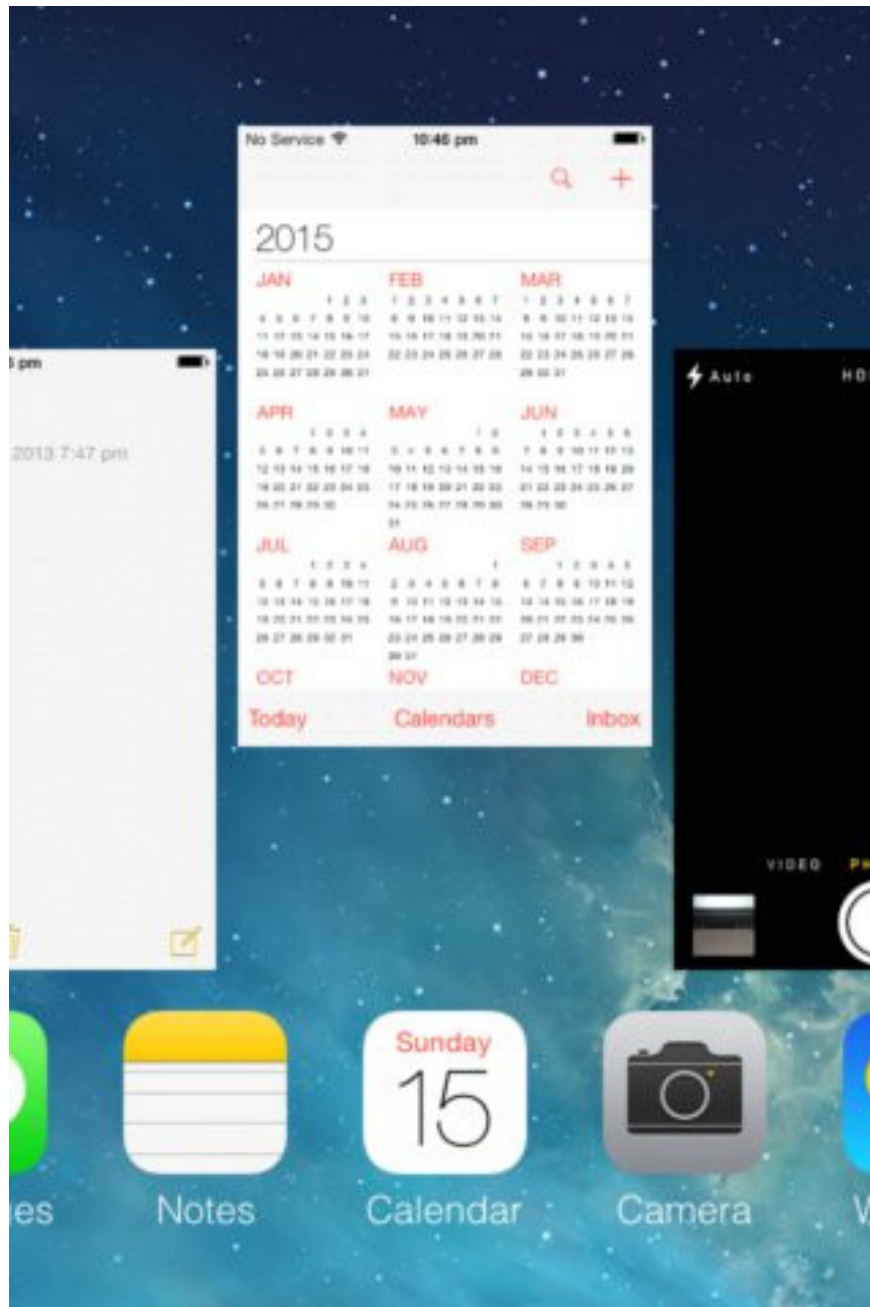

3. Restore settings on iPhone

The easiest solution to fix iPhone Camera error is to restore the original iPhone settings.

Go to Settings > General (> Reset) > Reset > Reset All Settings > Reset . The iPhone will then restore the entire installation to its original settings.

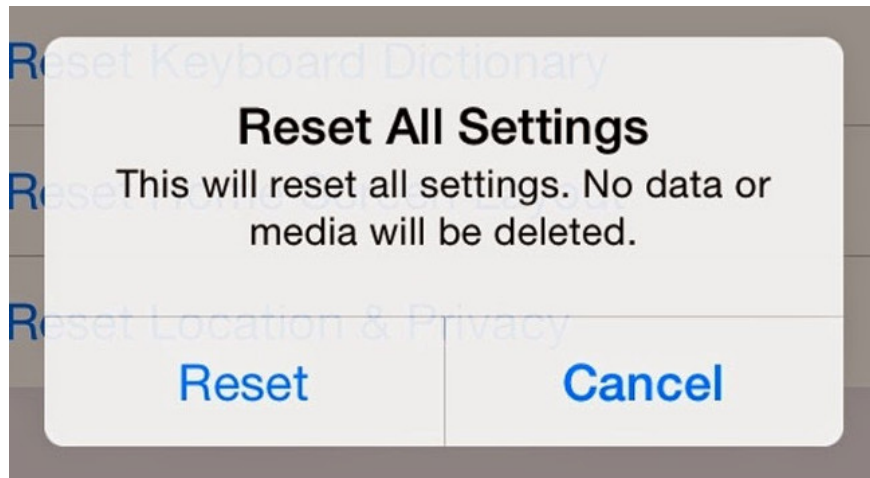

Now try opening the Camera app and see if this has resolved the error. If you were able to take photos as usual, congratulations. If not, go to the fourth step.

4. Restart the iPhone with Hard Reset

Hold the Home key combination and the Power key to Hard Reset your device (Hold the Power key combination and volume down key if you use iPhone 7 and iPhone 7 Plus). Then check your Camera app again.



 
5. Delete all contents and install iPhone to the original

If after taking the four steps above and still not helping you fix the iPhone error, follow this step. Some iPhone users have found that iPhone application errors are often caused by old data retention when restored. So deleting the entire content and installing the iPhone to the original may be the solution to overcome this.

Note that when doing this, all your data such as songs, videos, photos, contacts . will be deleted. So if you don't want to lose your valuable data, backup your data to iCloud.

Reference: Instructions for backing up and restoring iPhone data with iTunes

1. To delete the entire contents and set the iPhone to original, go to **Settings> General> Reset> Erase All Content and Settings (Delete all content and settings)** .

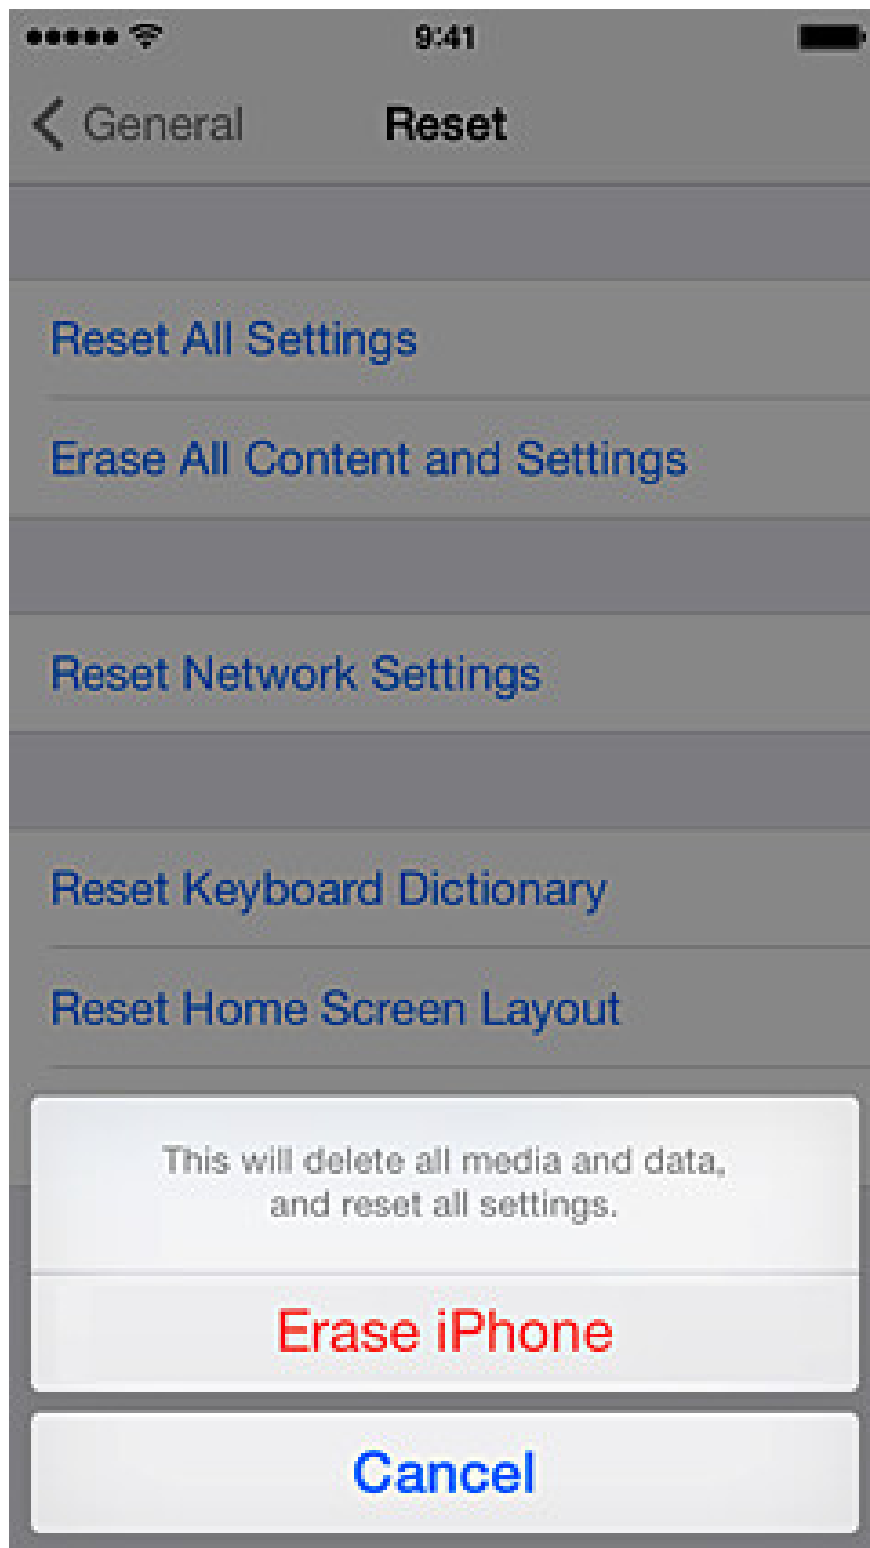

1. Then reset your iPhone like a new iPhone.

Hopefully with the above 5 steps, you will be able to completely fix the stalled iPhone Camera or black screen error. Good luck!

You finished reading the article "**How to fix crashed Camera or black screen on iPhone**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.

