

How to fix Out of Paper Error on HP Printer

Instructions on how to fix the HP out of paper error are simple and effective. Check the paper quality, turn off the printer, and clean the rollers. Click view now!

When using the HP printer, sometimes the error message "**Out of Paper**" appears, which confuses you and takes the most time. To determine exactly why the HP printer error Out of Paper, let's find out TipsMake through the article below!

1. The cause of the Out of Paper error on the printer

This error will become quite familiar if you use the printer regularly. Mostly, when printing, the user does not select the correct paper size. Or more simply, the tray you want to print has run out of paper.



Identifying this error is very simple, usually when printing a dialog box to process the print job. During the printing process, if there is an error, the computer will display an error message for users to easily fix. In this case, there will be an Out of Paper error message.

Attached is a guide with the line "Load A4 paper in Manual Feed". This means you need to put A4 paper in the Manual Feed Slot - there is currently no paper left.

2. How to fix the Out of Paper error on the printer

- Check paper quality

+ Open the tray and take out the stack of paper, arrange it neatly.

+ Check that the paper quantity is sufficient to make sure the paper does not exceed the quantity.

+ Try printing it again.



- Turn off the printer

Like any other machine, if something goes wrong, shutting down and restarting will be able to fix it. Although not standard in all cases, but still very useful. Moreover, the operation is simple, so you can try luck.

+ Disconnect the power cord behind the printer.

+ Wait 30 seconds, then reconnect the power cord to the device.

+ Turn on the power button to restart the device.



- Change paper settings

Changing the paper settings can easily correct the Out of Paper printer error. Because the error is usually caused by the user who does not know the installation. If you cannot do it yourself, get the help of a technician.

- Clean the roller

Dust, paper chips or other debris will prevent the roller from working properly as it was originally. Follow the following methods to clean the roller:

- + Remember to turn off the device, unplug the power cord before proceeding Open the access door, look for the rubber roller.
- + Moisten the cloth or sponge to not drop water into the machine.



- + Press lightly on the rollers, use your hands to rotate the rollers to charge all surfaces of the rollers.
- + If your machine has a paper reverser, clean the 2-sided rollers.

Close the access door, replace the paper tray and reconnect the source.

- + After the noise ends, print again.

Above are ways to fix the Out of paper that Mobile World wants to provide you with. Good luck!

You finished reading the article "**How to fix Out of Paper Error on HP Printer**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.