


How to Fix the Volume on Your Computer in Windows

Volume issues are very common on a Windows computer. The issues can usually be fixed by adjusting the settings or reinstalling the audio drivers. This wikiHow teaches you how to fix volume and sound issues on your Windows computer. Check...

Method 1 of 2:

Fixing Volume and Sound Loss Issues on Windows

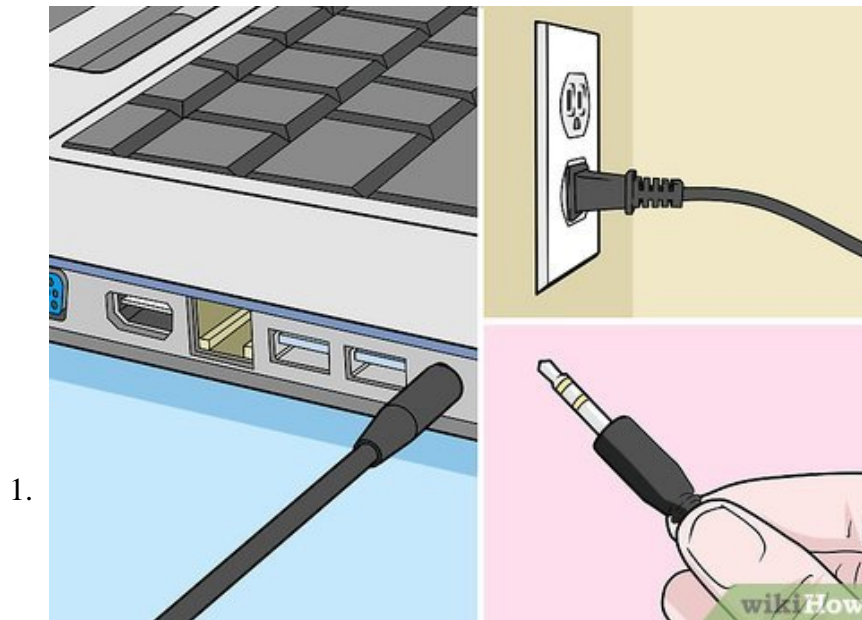 


Check the cables. If you are using an external device, such as speakers or headphones, check to make sure the cables are in good working order and connected to the proper audio port on your computer. If your speakers require a power source, make sure they are plugged into an electrical outlet and/or AC adapter.^[1]




Check the volume. If you are using external speakers or headphones that have an independent volume, make sure the volume is turned up and that the "Mute" button is not engaged. You can also use the following steps to check the volume on your Windows computer:

1. Click the Windows Start icon in the taskbar.
2. Type "Adjust volume."
3. Click **Adjust Volume**.
4. Use the slider bar below "Change device volume" to adjust the volume on your computer.

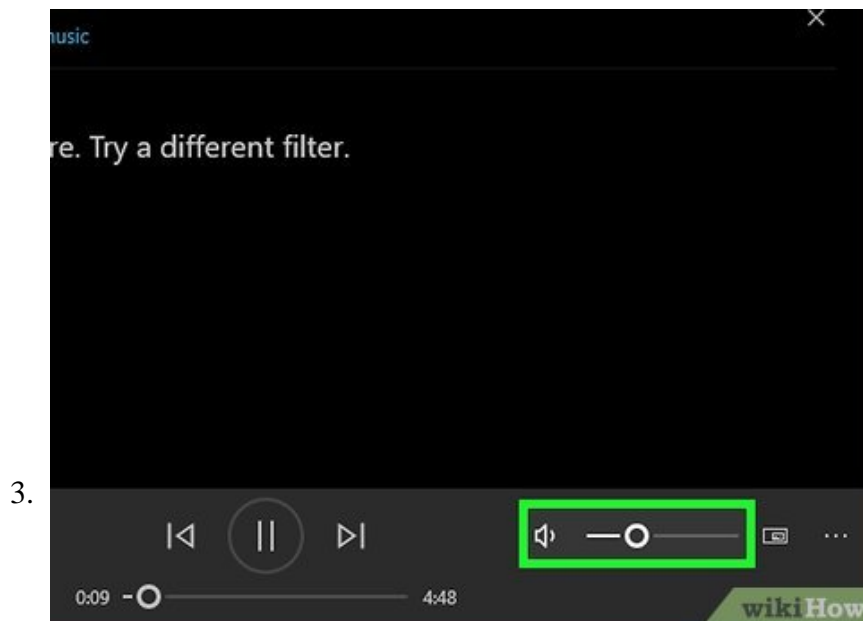


Check the sound and volume settings on individual applications. Check to see if you are having volume problems on all apps, or just one specific app. If you are experiencing volume problems on just one app, the problem may be with the sound settings for that app. For example, Spotify has a volume slider bar in the lower-right corner of the desktop app. You can also adjust the volume on YouTube videos by clicking the speaker icon and adjust the slider bar. Games may have their own sound and volume

 settings in the Settings or Options menu.

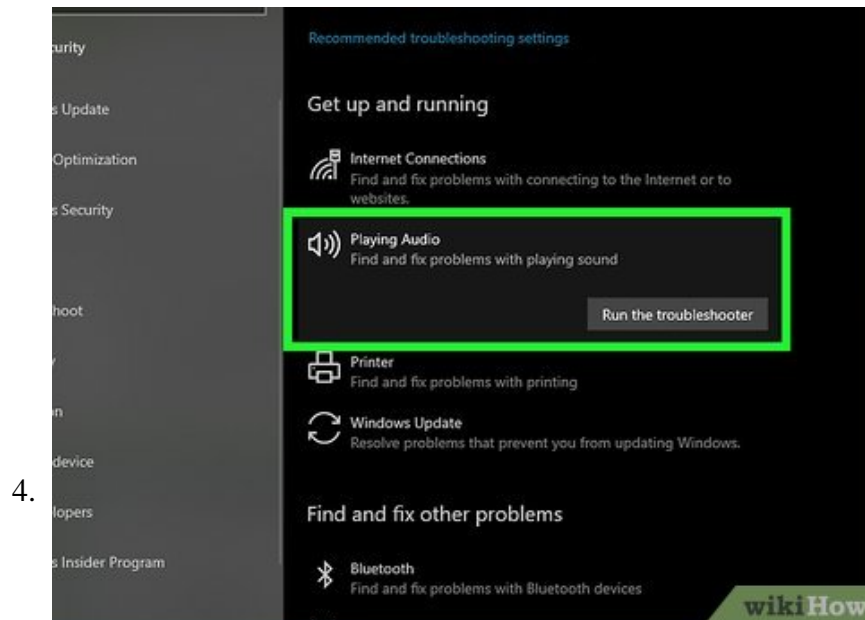


Use a troubleshooter. Windows computers come with built-in troubleshooter app that can help you fix volume issues. The Troubleshooter will ask you a series of questions that will help the troubleshooter determine the cause of your volume issue. It may also ask you to open specific settings and suggest that you make changes to the settings. Use the following steps to open the Windows troubleshooter:^[2]

 1. Click on the Windows Start icon in the taskbar.
2. Type "Troubleshoot Settings".
3. Click **Troubleshoot Settings**.
4. Scroll down and click **Playing Audio**.
5. Click **Run the Troubleshooter**.
6. Follow the instructions in the window.

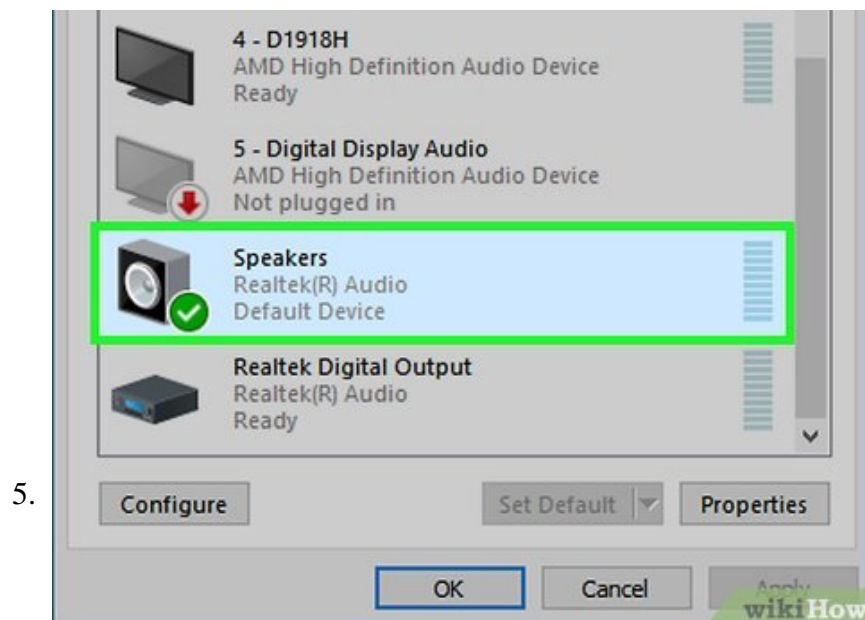


See what playback device is selected. If the sound is not playing from your computer, this may be because the wrong playback device is selected. For example, if the computer is set to play sound through headphones, sound may not come out of external speakers. Use the following steps to see what playback device is selected:

 1. Click the Windows Start icon in the taskbar.
2. Type "Control Panel".
3. Click **Control Panel**.
4. Click **Hardware and Sound**.
5. Click **Manage Audio Devices**.
6. Click the correct audio device.
7. Click **Apply**.
 1. You can also right-click on an audio device and click **Test** to test the audio device.

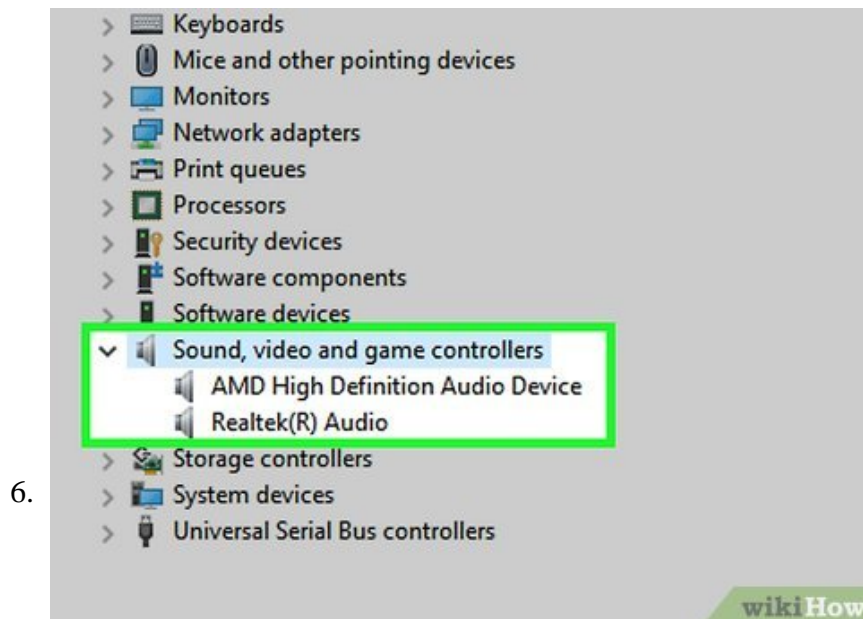

Check the sound card. Most modern computers have a built-in Realtek sound chip used to process audio. However, some older computers may use a third-party sound card to process audio. If your computer speakers plug in to a sound card on the back of your computer, you may need to open your computer and make sure the sound is installed properly. Use the following steps to make sure a sound card is connected to your computer:

 1. Click the Windows Start icon in the taskbar.
2. Type "Device Manager."
3. Click **Device Manager**.
4. Double-click **Sound, video and game controllers**.
5. Check to make sure an audio device is listed below "Sound, video and game controllers."

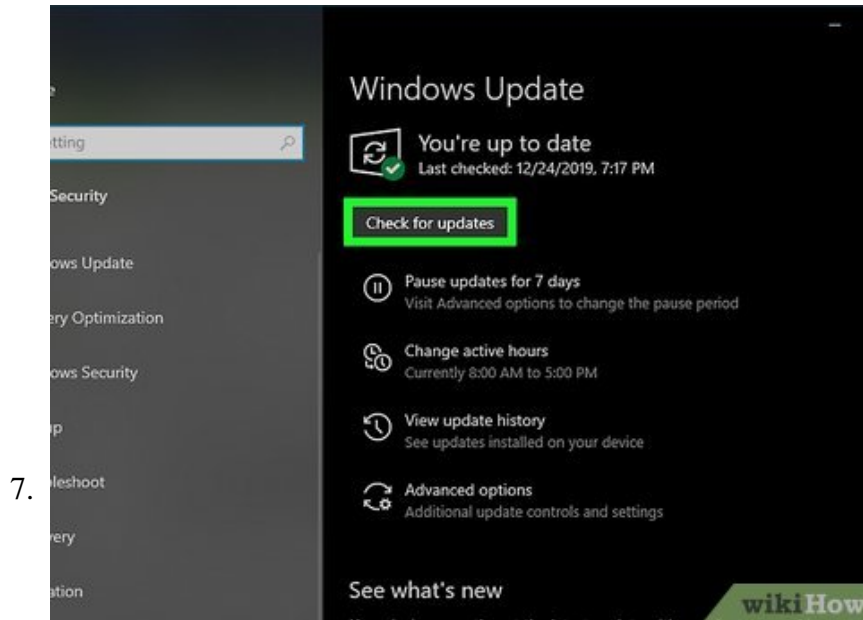

Check for updates. Sometimes, your audio drivers may be out-of-date and causing problems on your computer. Use the following steps to check for Windows updates:


1. Click the Windows Start icon in the taskbar.
2. Type "Check for updates"
3. Click **Check for updates** in the Start menu.
4. Click **Check for updates** in the Windows update menu.
5. Click **Download and install now**.




Install drivers for your audio device. If you are using a third-party sound card, you may need to install the drivers for your sound card. The sound card should have come with a CD that you can use to install the drivers for your sound card. If you do not have the CD, you can check the manufacturer's website for a download of the audio drivers. Download and install the audio drivers for your sound card.

Method 2 of 2:

Recovering the Volume or Sound Icon

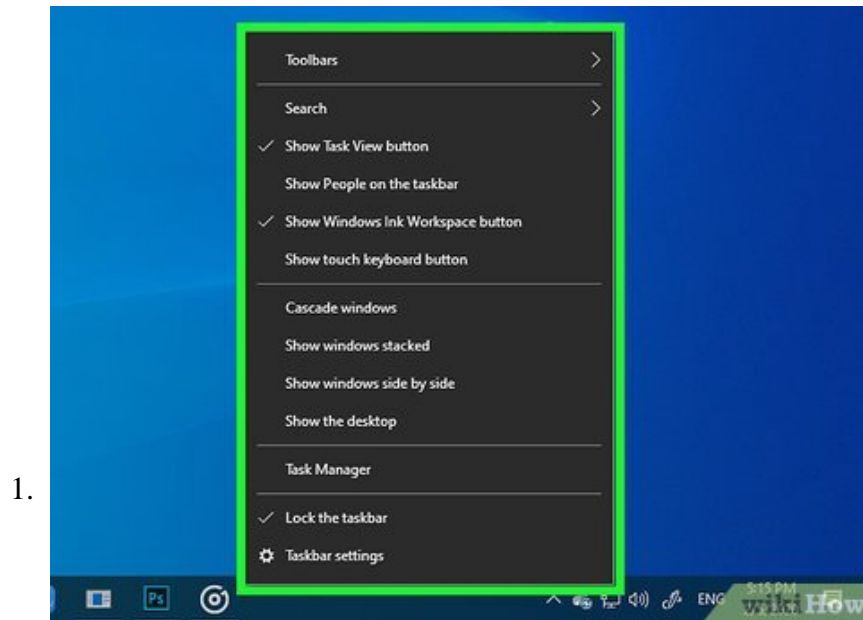


 Right-click the Windows taskbar. By default, the Windows taskbar is at the bottom of the screen. Right-clicking it displays a pop-up menu.

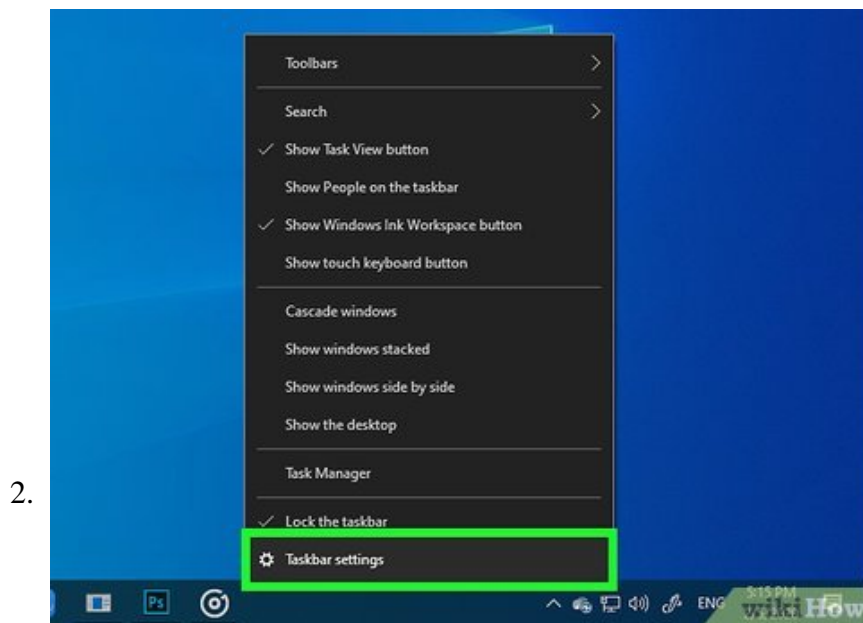


Click [Taskbar Settings](#). It appears at the bottom of the pop-up menu that appears when you right-click of the taskbar.

 3.

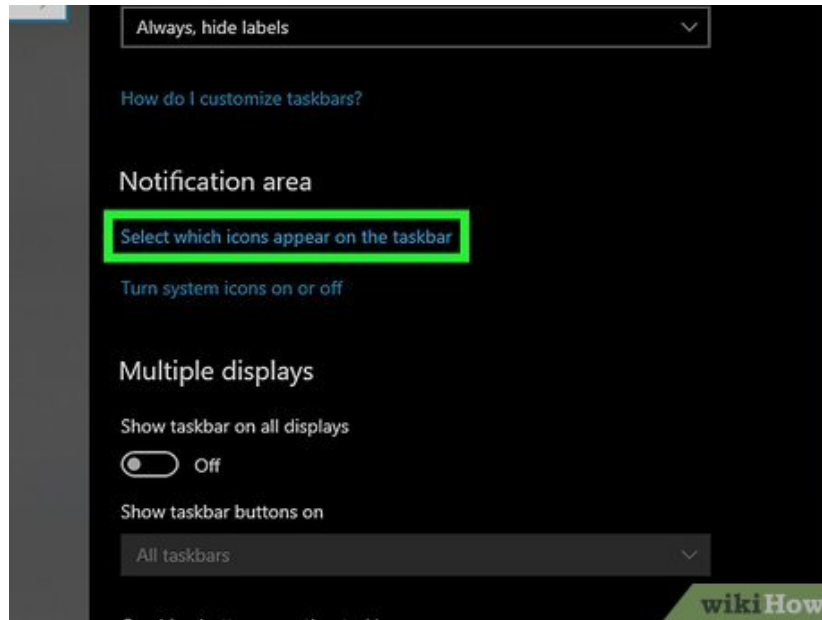


Scroll down and click **Select which icons appear on the taskbar**. It's below the "Notification area."

 4.

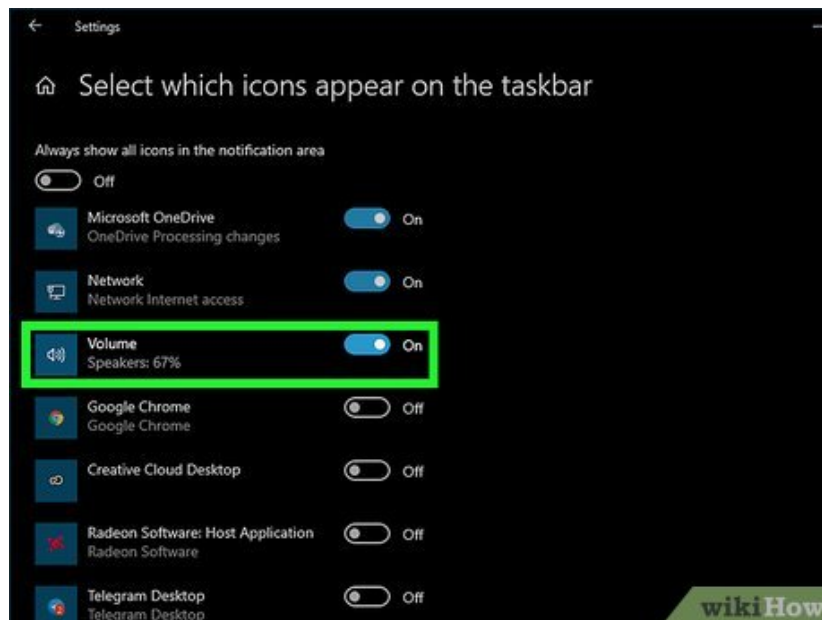

Click the toggle switch

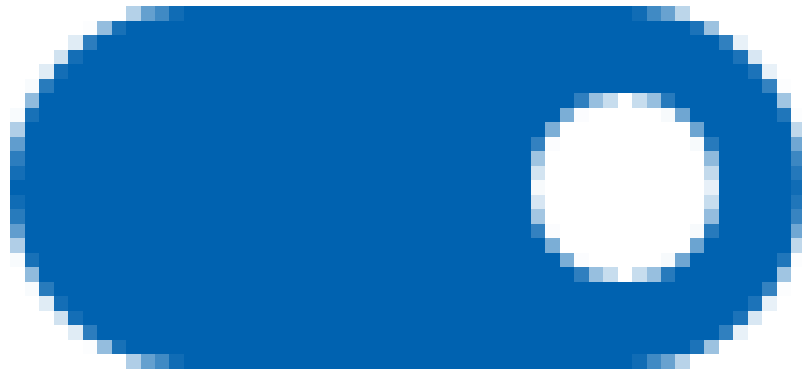

next to "Volume". It's near the top of the menu. This displays the volume icon in the taskbar notification area to the right.

1. If you still don't see the icon in the taskbar, click the icon that resembles a bracket pointing up on the left side of the notification area. This displays all available icons in the taskbar.
2. You can click and drag icons in the taskbar to re-arrange them.

You finished reading the article "**How to Fix the Volume on Your Computer in Windows**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.