

# How to reset WiFi router VNPT

When the VNPT network has a problem, or you don't remember the password, you can reset the network router and reset the WiFi router

To increase WiFi security, we will choose to change the WiFi password to more unpredictable numbers. However, many people after changing the password do not remember the password after a long time of use, so it is necessary to reset the WiFi router.

Or there are many other cases that need to reset the WiFi router such as problematic WiFi, transfer the device to other users, . When performing reset router, it means that all settings on WiFi will disappear and be restored. Restore the default settings to the original settings. And so we can customize WiFi at our discretion.

Users should be aware that if you do not know how to reset the WiFi router, you need a support technician.

1. Common TP Link modem login addresses
2. How to login iGate GW040 GPON ONT of VNPT
3. Instructions for configuring Cisco routers

## Guide to reset VNPT WiFi router

### Method 1: Reset on WiFi router

Determine the reset button on the WiFi router. This reset button will be located on the back or bottom of the router. Find out the location of this router button. Next, plug in the power to the router and use a toothpick, or a small object to press and hold the reset button for 10 seconds. The router will then restart.

This applies to all WiFi router devices of carriers.




## Method 2: Reset WiFi via web interface

On VNPT network device management page, users can reset WiFi network right here.

### Step 1:

With VNPT WiFi network, we access **the address 192.168.1.1** to access the device management page. After that, login username is admin, password is admin, or username is operator, password is oper @ tor.

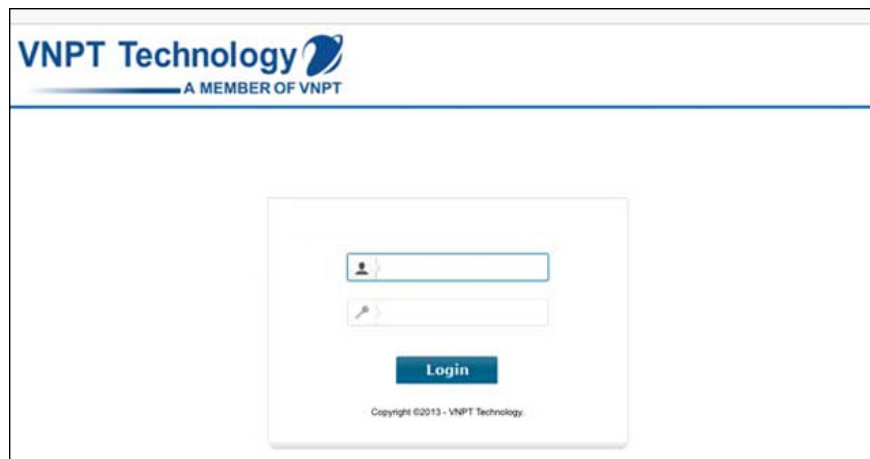

### Step 2:

In the management page interface, access the path of **Management > Settings > Factory Reset** and click **Restore Default Settings** as shown below to reset VNPT WiFi.



With a way to reset the button on the WiFi router, users can apply to all WiFi router carriers. As for the second way, we need to know the address to access the WiFi management page of the company to reset WiFi.

See more:

1. How to access IP address 192.168.100.1
2. Instructions for installing Wifi Router Tenda W311R
3. Fix IP address conflict error on Windows computer

I wish you all success!

You finished reading the article "**How to reset WiFi router VNPT**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.