

# How to switch from degrees Fahrenheit to degrees Celsius on Casper air conditioner remote control

You are having difficulty setting the temperature on the air conditioner because the control of your Casper air conditioner displays the F temperature instead of the normal C temperature. To fix this problem, you should switch from Fahrenheit to Celsius for easy use.

You are having difficulty setting the temperature on the air conditioner because the control of your Casper air conditioner displays the F temperature instead of the normal C temperature. To fix this problem, you should switch from Fahrenheit to Celsius for easy use.

Degrees Fahrenheit and Celsius are both units of temperature measurement, but the temperature measurement unit Celsius is more popular and easier to remember for users in our country.



## The cause of the air conditioner control being switched to degrees Fahrenheit

1. When installing a new air conditioner, the manufacturer defaults to setting the temperature display mode on the controller to degrees Celsius.
2. The air conditioner's temperature display is usually due to the user pressing the wrong button or a child playing with the wrong key combination on the control, causing the displayed temperature to change from degrees Celsius to degrees Fahrenheit.
3. The control circuit is broken or short circuit can also lead to the temperature display F.

# Convert degrees Fahrenheit to degrees Celsius on Casper air conditioner control

With Casper air conditioner lines from 2019 - 2020



To adjust the temperature from degrees Fahrenheit to degrees Celsius for Casper air conditioner control (models such as: HC-09IA33, HC-12IA33, HC-18IA33, HC-24IA33): Press and hold the Smart + Time key combination (picture clock) for about 3-5 seconds, when the temperature changes to degrees Celsius it's done.

### **With Casper air conditioner lines from 2021**

When you want to change degrees Fahrenheit to degrees Celsius for the new Casper air conditioner from 2021 to present, users press and hold the Cool and Heat keys on the remote at the same time until the temperature display changes from degrees Fahrenheit to degrees Celsius.



You finished reading the article "**How to switch from degrees Fahrenheit to degrees Celsius on Casper air conditioner remote control**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.