

How to turn on and turn off Wifi on laptop very fast

How to turn on WiFi on laptop very fast and turn off WiFi when no need to connect to the Internet with just a pair of shortcuts. We invite you to follow up how to turn on WiFi and turn off WiFi on your computer.

Sometimes the laptop does not catch WiFi network because the reason is very simple, it is not turned on Wifi properly. With the keyboard layout of each different laptop company, as well as the management of Wifi in the default or forced to use the software, it may cause difficulties for users. In the article below, TipsMake.com will introduce you how to turn on and off Wifi to connect to the Internet on a laptop.

Articles need reference:

1. How to fix computer network errors, laptop with yellow exclamation

How to turn on and off Wifi on laptop with hard keys to connect to the Internet


For most laptop keyboards today, turning on or off WiFi is much simpler than before. Please note:



On the range of keyboard numbers, laptops usually have symbols such as Sleep - sleep mode, Wifi icon - turn on or turn off Wifi, Sound - increase, decrease or turn off the sound . To use these functions, you guys Please press

the key combination:

1. Function key (abbreviated as Fn - near the Ctrl key in the left corner) + corresponding Wifi icon to turn on or turn off Wifi quickly. As the example image here is the shortcut **Fn + F3**.
2. For example, this is when Wifi is off:

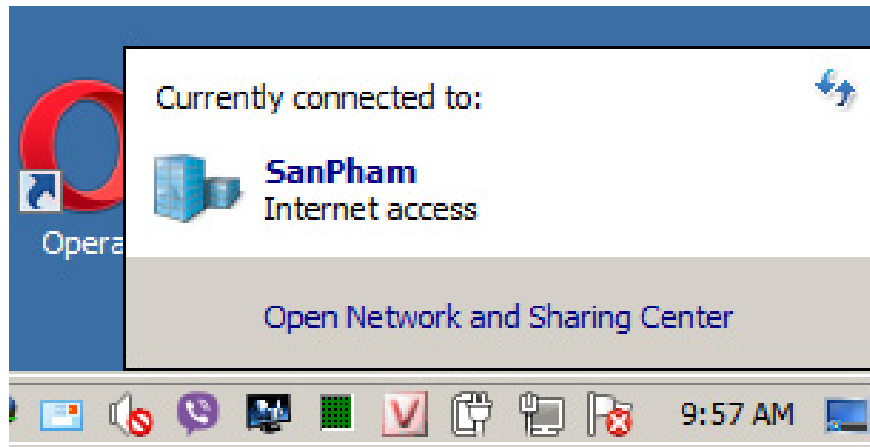

1. And after pressing Fn + F3:



However, for some laptops of **HP Compaq** or **Toshiba** , the key turns on and turns off Wifi next to the power button as shown below. Turned on, the Wifi button is green, while orange or red is in off mode:



Or with some old laptop series, the hard keys turn on, turn off Wifi at the side as shown below:



How to turn on / off Wifi on the computer by installing Windows

If the Fn keys, your hard keys are broken or you can't turn on Wifi from these keys, try using the settings available on Windows. TipsMake.com has a very detailed tutorial on Windows 10 and Windows 7, please refer to dentist.

1. Turn on / off Wifi on Windows 10
2. Turn on WiFi on Windows 7 to fix laptop errors not found WiFi network

Hopefully, with very simple information as above, you can correct the error of not catching Wifi, not connecting to the Internet or the network card with exclamation on computers and laptops. Good luck!

See more:

1. Fake IP, IP change software, best anonymous surfing
2. How to change DNS to surf faster, speed up Internet
3. How to check who is using Wifi temple, your home WiFi theft

You finished reading the article "**How to turn on and turn off Wifi on laptop very fast**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.
