

Instructions for basic operations with Dell computer monitors

Instructions on basic operations with Dell computer screens such as: adjusting brightness, rotating the screen base, turning on and off the touch screen, how to reset Dell computer screens...

Dell monitors are one of the best computer monitor brands on the market today with many modern, high-end features that bring an extremely superior user experience to users. However, not everyone knows how to adjust the features that Dell provides. In the following article, TipsMake would like to introduce to readers some of the most basic operations with Dell monitors such as: adjusting Dell screen brightness, how to rotate the screen, removing Dell monitor feet, how to reset Dell computer screens, . to help readers use the product in the most satisfactory and satisfying way.

Instructions for operating Dell computer monitor controls

Like other monitor lines, Dell monitors usually have a system of 5 control buttons. Including:

 
ON/OFF button: has the function of turning the screen on/off.

2 Adjustment buttons: help you move the selection bar on the control menu.

1 Select/ Accept button: allows you to confirm control operations.

1 Cancel button: has the effect of returning/exiting control operations.

In addition, the buttons can also be assigned a shortcut function to help you access that setting mode faster. But when working with the menu panel, they always have the above functions.

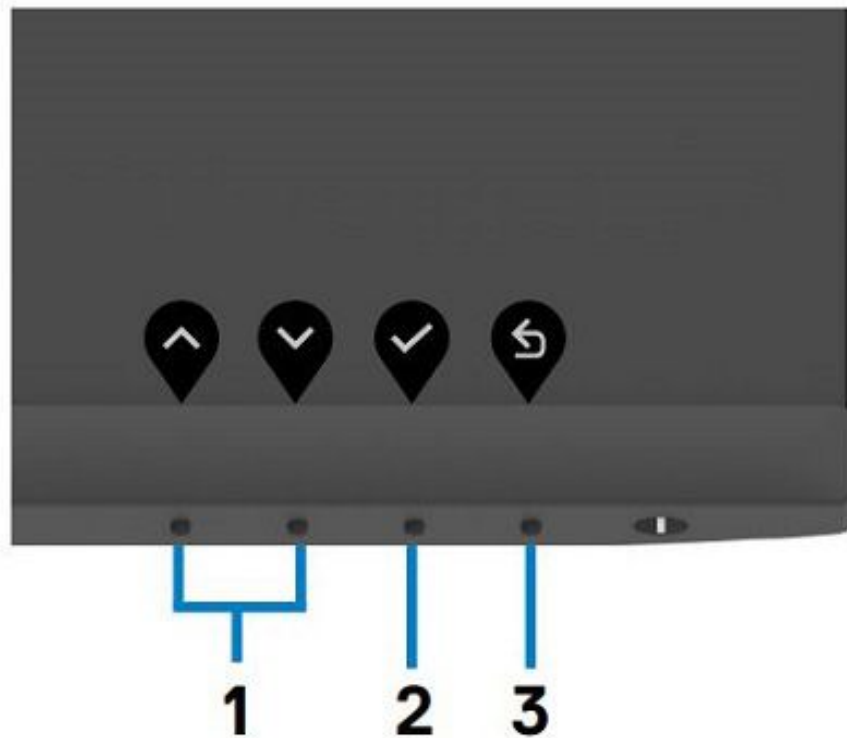

Dell computer monitor control buttons

Depending on the product line, the location of the buttons is different, you can spend a few minutes to get familiar with the function of each button. Once you get used to it, operating the screen will become very simple and easy.

 
Instructions for basic operations commonly used with Dell computer monitors

Adjust Dell screen brightness

Adjusting the brightness of your Dell monitor is one of the most basic and easiest operations to do with your Dell monitor. To do this, you can do the following:

1. Press the button with the Menu icon on the screen. This button may function as a Select or Cancel button, depending on the product line.
2. Move the selection bar to the Brightness line, which is usually located at the top of the Menu page.
3. Press the Select button to make a selection.
4. Use the scroll button to adjust the Dell screen brightness up or down as desired. When the screen has reached the desired brightness, press Select to save.
5. Press the Cancel button to close the Menu bar and enjoy the screen with new brightness.

So you can adjust **the brightness of the Dell screen** as you want.

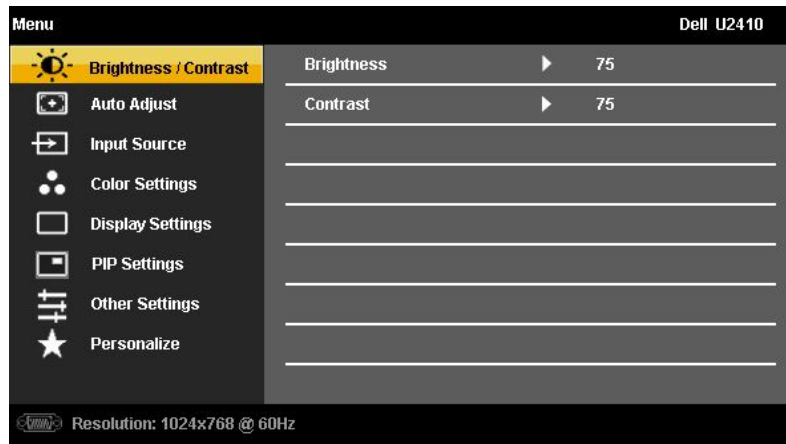


How to adjust Dell screen brightness

How to reset Dell computer screen

After changing many settings, you will need to know **how to reset the Dell computer screen** so that you can restore the system to its original state when necessary. This helps you fix incorrect settings quickly even if you do not know where you have adjusted the wrong adjustment. How to reset the Dell computer screen can be summarized in the following steps:

1. Press the button to open the Settings Menu bar on the screen.
2. Move the selection bar to the Others or Other Settings box.
3. Click Select.
4. Move the selection bar to the Factory Reset box.
5. Click Select.
6. The machine will ask you if you are sure you want to Reset the screen settings, select Yes and press Select.

 Immediately after that, the screen will restore all settings to their original defaults. This is the simplest and easiest way to reset a Dell computer screen , helping you quickly and safely fix incorrect adjustments to your Dell screen.

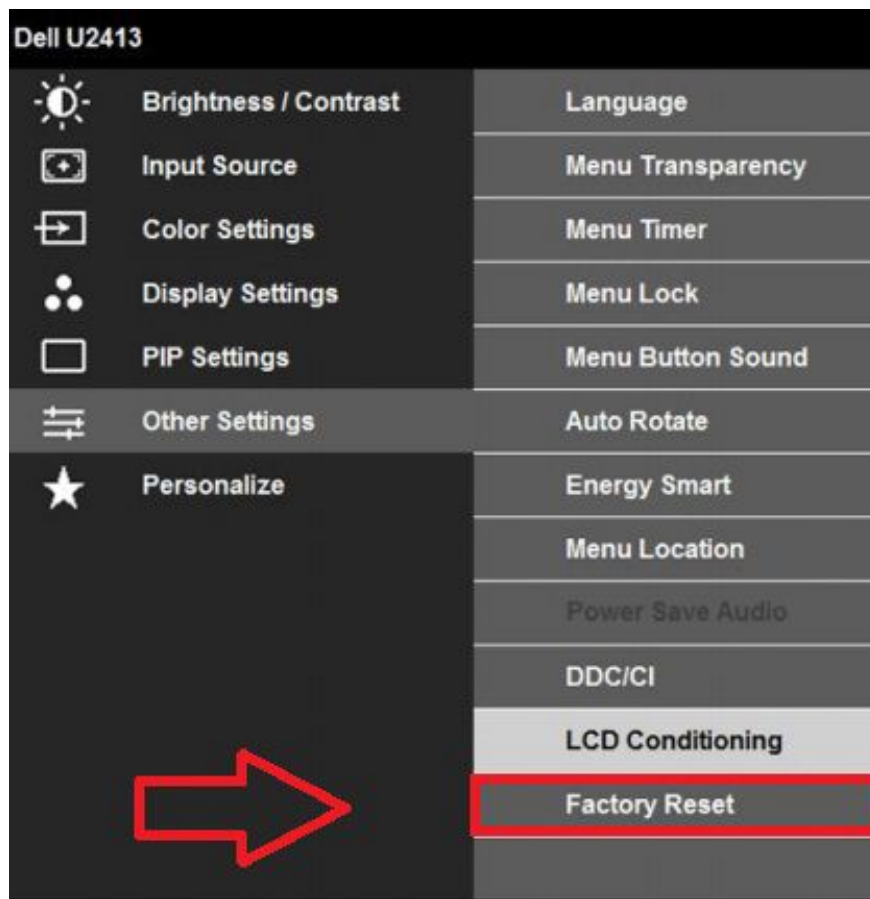

How to reset Dell computer screen

Remove Dell monitor stand

Removing the Dell monitor stand is also a basic operation that many people wonder about to serve the transportation or installation of the monitor stand. Removing the Dell monitor stand is not complicated at all, even quite simple, but requires the user to know the correct operation method, avoid breaking the pin, breaking the monitor stand.

1. To remove the Dell monitor stand, you should first place the monitor face down on a flat surface, this helps ensure the monitor is safe from falling and impact while removing the stand.
2. Look at the back of the monitor, above the monitor foot you will see a small slot with a round dot in the middle. This is the Dell monitor foot unlock button.
3. Find a small stick to press into this unlock button. You can use a screwdriver or any stick small enough to get inside.
4. Once the latch is released, gently pull the monitor stand from top to bottom and remove the stand from the monitor.

After you have finished **removing the Dell monitor stand** , you can easily store it in a box for transport or install a new, more convenient stand for your monitor.



Remove Dell monitor stand

How to rotate Dell computer screen

How to rotate a physical Dell computer screen

To be able to rotate the Dell computer screen depends on whether the monitor stand supports rotation or not. The operation is very simple, you just need to use both hands to hold the two sides of the screen and rotate it in the direction you want. With monitor stands that do not support rotation, of course: nothing will happen. However, you can still easily choose to buy a monitor stand at TipsMake to rotate the Dell computer screen very flexibly and conveniently. The stands not only help you rotate the Dell screen in any direction you want, but also help raise, lower or move the screen position extremely easily. Don't miss this cheap but surprisingly useful product!




How to rotate Dell computer screen with mount

How to rotate Dell computer screen in Windows.

This helps you rotate the image displayed on the Dell screen in the direction you want without having to move or physically impact the screen. To rotate **the Dell computer screen** in Windows, in the Windows 10 interface, right-click on the Desktop wallpaper, select Display Settings.

Find Display Orientation, click on the selection bar at the bottom. You will see 4 options appear, including:

 1. Landscape: Displays the screen in vertical orientation by default.
2. Portrait: Rotate the screen 90 degrees to the left from the default.
3. Landscape (flipped): Flip the screen 180 degrees from default.
4. Portrait (flipped): Rotate the screen 90 degrees to the right from the default.

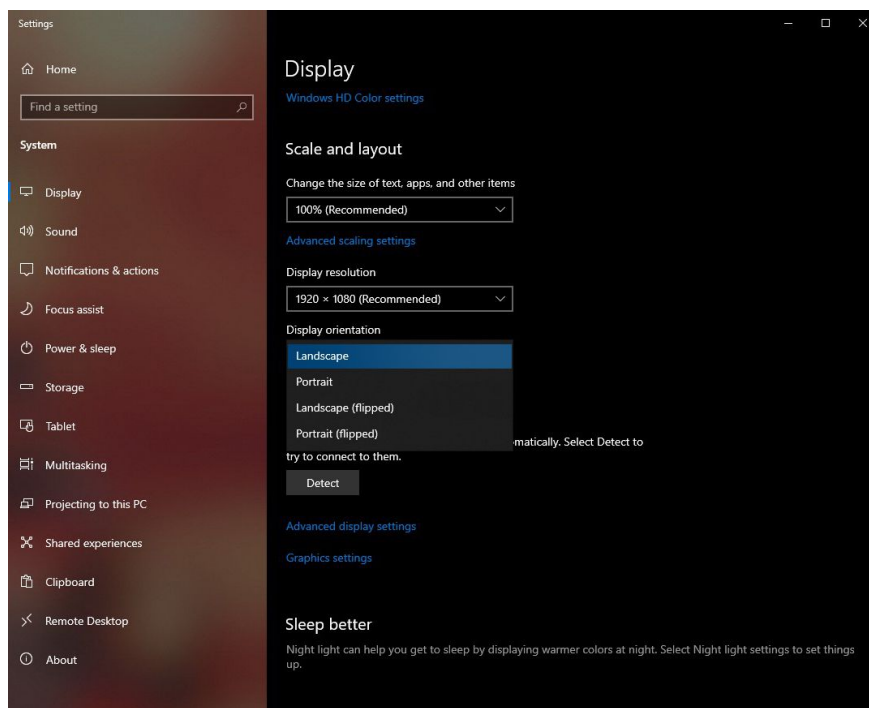

How to rotate Dell Win 10 computer screen

This way of rotating Dell computer screen helps you display images on the screen in any direction you want, so simple and easy to do, right?

 
Check and fix some common errors with Dell monitors

Dell screen error yellow tint

Dell screen yellowing is an error that confuses many people without knowing why or how to fix it. Below are some causes of Dell screen yellowing:

1. Night light mode: The most common reason why Dell screens are yellow is because you accidentally turned on Windows' Night light mode without knowing it. This is a mode that turns off blue light, helping to reduce eye strain when looking at the screen. However, this mode changes the display color of the screen, causing an unpleasant yellow tint for users. To fix the error, you just need to: Right-click on the desktop wallpaper, select Display settings. In the Night light section, click to switch Night light mode

- from On to Off and you have successfully fixed the error of **Dell screens being yellow** .
2. Screen color misalignment: Incorrect color settings can also cause the Dell screen to have a yellow tint, or it can also have other colors. In this case, the most effective and simple way is to restore the factory settings by **resetting the Dell computer screen** as instructed above. After resetting, the color of the Dell screen will return to its original state and will no longer have a yellow tint.
 3. Graphics card and driver errors: Graphics card and driver errors can also be the cause of **the Dell screen being yellow** . You can update the latest VGA driver to check if the error is due to the driver. If not, you can try replacing the graphics card for the machine. If the screen color returns to normal after replacing the VGA, your graphics card is faulty and needs to be replaced.
 4. Other component errors: Sometimes a few other components in the computer malfunction can also cause the colors displayed on the screen to change. If you plug the Dell monitor into another signal source and see the display normal, the problem lies with your computer. You should check the components again or take the computer to a maintenance and repair facility.

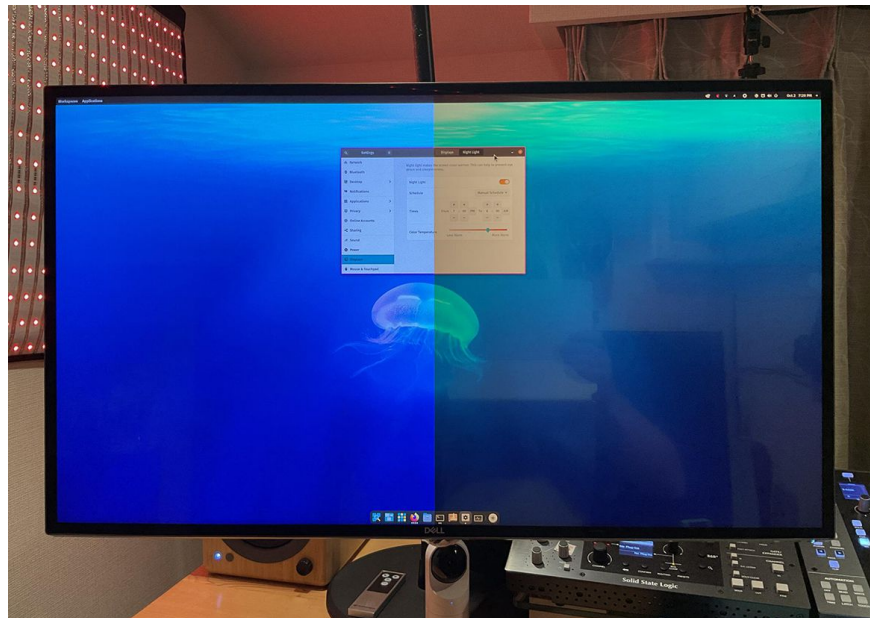

Dell screen yellow

 
In addition to the above causes, **the yellow screen of Dell** can also appear due to a few other reasons. In case you cannot find a way to fix it at home, you should bring your device to TipsMake branches to get help from the technical team!

Dell screen has stripes

Dell screen stripes are not a common occurrence, but sometimes it happens and causes quite a bit of discomfort for users. There are a few common causes of Dell screen stripes as follows:

1. Cable Fault: A faulty cable can cause stripes on your Dell monitor. This sometimes happens when the cable is bumped or twisted over time. You can try replacing the display cable to see if this is the cause of your Dell monitor stripes.
2. Video card error: Similar to the yellow tint on Dell monitors, a faulty video card can also cause stripes on Dell monitors. Replacing the VGA will help you determine if this is the cause of the problem.

3. Driver conflict: quite rare but indeed driver conflict can create errors of stripes on the screen, even a lot. You can try to delete all drivers and reinstall, or reinstall windows to fix the error in this case.

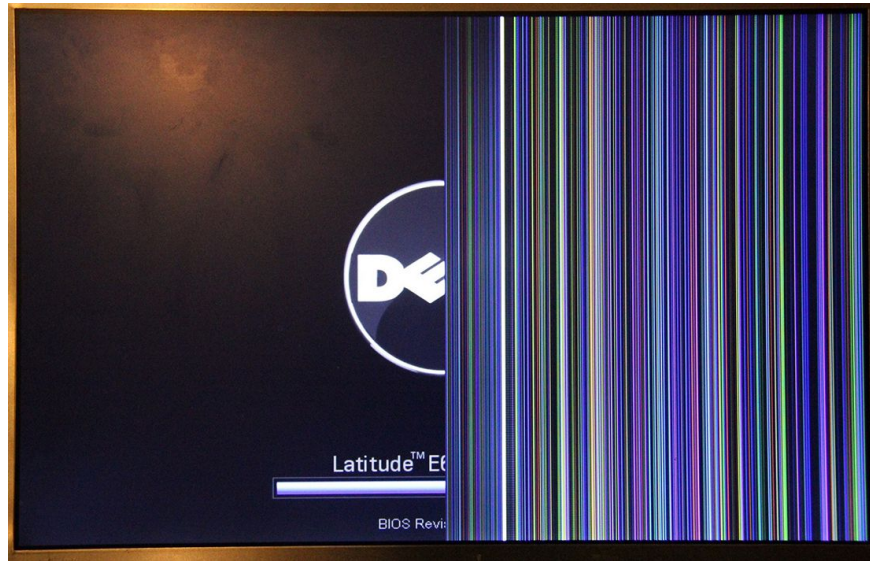

Dell screen has stripes

In addition, **the Dell screen stripes** can be caused by some hardware errors, which are not easy to fix at home. Technical and repair facilities will be the best choice if the situation does not improve after you try the above 3 options.

Conclude:

Above are some of the most basic operations for Dell monitors and ways to fix some common errors. During use, if you have any questions or encounter any unusual errors, please contact TipsMake hotline 1900 1903 to receive the fastest and most accurate technical support. TipsMake wishes you always have the best experience with your Dell monitor.

You finished reading the article "**Instructions for basic operations with Dell computer monitors**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.