

Instructions for fixing device Usb error not recognized Code 43

Error Code 43 appears with the message: Windows has stopped this device because it có báo cáo l?i. (code 43). So what is Error Code 43? How to fix this Code 43 error? Please refer to the instructions below of TipsMake.com to know how to fix Error Code 43.


In the previous article, TipsMake.com introduced you 4 basic steps to fix USB Device Not Recognized errors on Windows, and this time we will continue with another problem when connecting USB devices (like Flash drive, portable hard drive ..) as well as some other connection standard with computer, it is Error Code 43 error.

Error Code 43 appears with the message: "Windows has stopped this device because it has reported problems. (Code 43)". So what is Error Code 43? How to fix this Code 43 error? Please refer to the instructions below of TipsMake.com to know how to fix Error Code 43.

Error message Code 43

1. Windows ?ã b? k?t thúc này vì nó có báo cáo l?i. (Code 43)

Illustration:

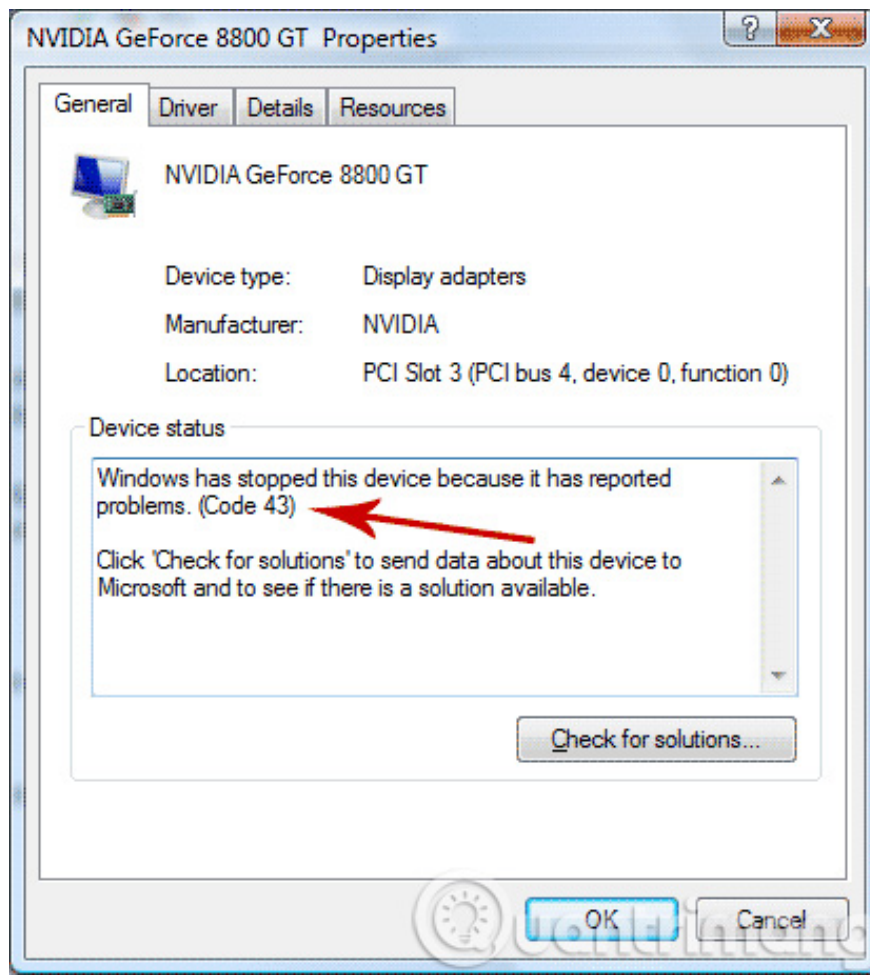

Error 43 occurs with the video card - VGA

What is the Error, Error Code 43 on Windows?

Error Code 43 is one of Device Manager's error codes, which occurs when Device Manager stops a hardware device because the hardware reports to Windows that it has some unknown issues. This message means a hardware problem or driver problem that Windows does not see but affects hardware.

Detailed information about Device Manager error codes like Code 43 is available in the Device Status section of the device properties.

The most common is when we plug the USB drive into a computer, laptop running Windows, and one of the main USB drivers fails, and the operating system will display the error message as above. And of course, you won't be able to use that USB drive. More specifically, when Windows starts, or when connecting a USB device, there is a certain USB driver that is broken (we call it so) that the cache needs to fill the driver system. complete.

Code 43 error can occur with any hardware device in Device Manager although most Code 43 errors appear only on video cards and USB devices such as printers, webcams, iPhones / iPods, etc. Microsoft operating system may also encounter Code 43 Device Manager error such as Windows 10, Windows 8, Windows 7, Windows Vista, Windows XP, etc.

How to fix Error Code 43

1. Restart the computer. The Code 43 error you encounter may be a temporary hardware problem, so restarting the computer may fix the error 43.

1. Some users said that the computer is turned off completely (not reset) and then turned on again and corrected the Code 43 error, especially the error on the USB device.
2. Remove all USB devices from the computer, turn off the computer (unplug the power cord completely from the power outlet) or remove the battery (with laptop). Leave it for about 5 - 10 minutes, then reconnect the USB port and turn on the computer to see if the problem is fixed.
3. For computer case, you can try to tighten the screws, reconnect the wires between mainboard and power, hard drive .

2. Did you install the device or make changes in Device Manager before a Code error occurred? If so, those changes have caused Code 43 error. The method is very simple, just undo the changes made in Device Manager, restart the computer and then check the error 43.

Depending on the changes made, there are a number of possible solutions:

1. Delete or reconfigure the newly installed device
2. Install the driver back to the previous version
3. Use System Restore to undo changes related to Device Manager.

3. Reinstall the device driver. Uninstalling and then reinstalling the device drivers is a viable solution for Code 43 error.


Note : If the USB device causes a Code 43 error, uninstall all devices in the Universal Serial Bus controllers section of the Device Manager to reinstall the driver. It includes Mass Storage Device, USB Host Controller and USB Root Hub. Reinstalling the driver properly, is not as simple as updating the driver. Reinstalling the driver is completely the process of uninstalling the driver and then let Windows install it from where it came from.

4. Update the device driver. In some cases, updating the latest driver version to the device may fix Code 43. If the updated driver update is fixed 43, it may be that the Windows drivers reinstalled in Step 3 are broken or not. Correct driver.

5. Install the latest Windows service pack. Microsoft service packs or Windows patches may contain a Code 43 fix.

1. Install & Uninstall Service Pack 1 on Windows 7

6. Update the BIOS. In some cases, the old BIOS may cause a device problem that leads to Code 43 error.

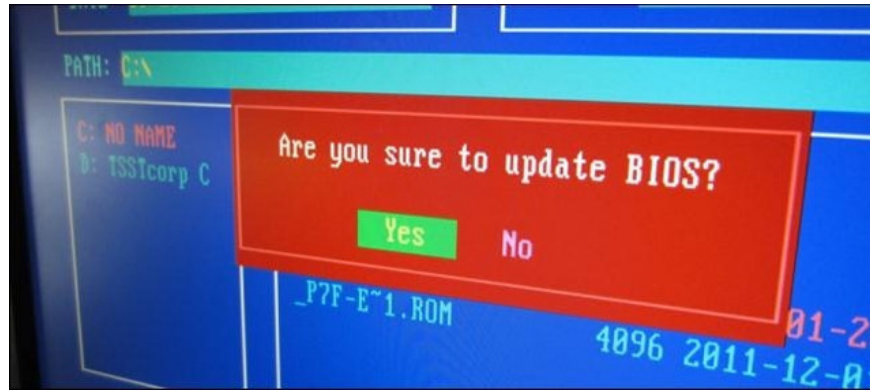

7. Replace the data cable that connects the device to the computer, if available. This Code 43 fix is ??useful when an error occurs with external devices such as USB or FireWire devices.

8. Refer to the hardware device user manual and follow the troubleshooting instructions. This measure may seem generic but the Code 43 error is hardware related, so viewing this information may be useful.

9. Buy a USB hub if a USB device causes Code 43 error. Some USB devices need more power than the USB ports built into the computer. Plugging these devices into a USB hub can fix the Code 43 error.

10. Replace hardware. Hardware devices can cause Code 43 errors, in which case the user should replace the hardware. Another possible Code 43 error is that the device is not compatible with the Windows version, checking Windows HCL to make sure there is no device that is not compatible with the software.

Note:

1. Device Manager error code is only for Device Manager. If you see a Code 43 error elsewhere in Windows, chances are it is a system error code, so you cannot apply a fix like the Device Manager error.
2. If you're not sure about the hardware problem that caused the Code 43 error, you can try installing Windows repair. If that doesn't work, try installing a new Windows.

See more:

1. 4 simple steps to fix USB Not Recognized errors
2. Common computer errors and remedies (Part 1)

Good luck!

You finished reading the article "**Instructions for fixing device Usb error not recognized Code 43**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.