

Instructions for installing Wifi Router Tenda W311R

Wireless Router Tenda W311R has Wifi broadcast function for mobile devices or laptops that can access the internet, do you know how to configure them? The following article will show you how to configure them.

Wireless Router Tenda W311R has Wifi broadcast function for mobile devices or laptops that can access the internet, do you know how to configure them? The following article will show you how to configure them.

Note before configuring the Wireless Router Tenda W311R:

- You need to carefully look at the parameters attached to the router such as the address to access (*usually 192.168.0.1*), username and password to login (*usually for admin and admin or 12345678*). If you do not have access to it, you should go back to the initial default mode for easy configuration (*Black, small Reset button at the back of the Router*).




- Should use **Internet Explorer** (IE) instead of using Firefox or Google Chrome.

- When configuring you should plug the router directly into your PC via RJ45 cable and plug in the yellow LAN on the router
- On the computer, you set dynamic IP, not set static if set static, must coincide with the router's IP address range

Start configuring the Wireless Router Tenda W311R

Step 1: Access the Router according to the parameters attached

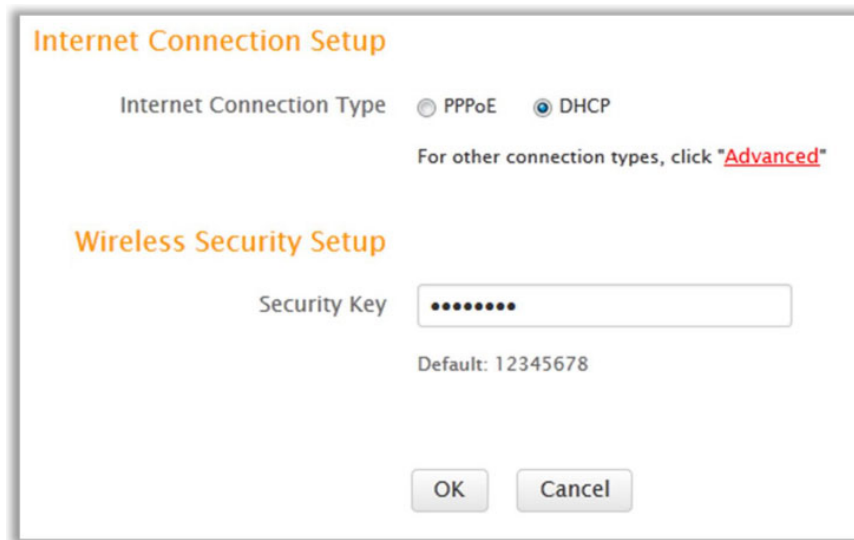


The screenshot shows the 'Internet Connection Setup' and 'Wireless Security Setup' sections of the router's web interface. In the 'Internet Connection Setup' section, the 'Internet Connection Type' is set to 'DHCP' (selected with a radio button). Below this, there is a note: 'For other connection types, click "Advanced"'. The 'Wireless Security Setup' section has a 'Security Key' field with a masked password (represented by dots) and a 'Default: 12345678' label. At the bottom of the form are 'OK' and 'Cancel' buttons.

Click **DHCP** , let the Router grant the device IP dynamically when accessing the network, then click **Advanced** to continue

Step 2 : Here you click the **Wireless** card


Step 3 : Select as shown below

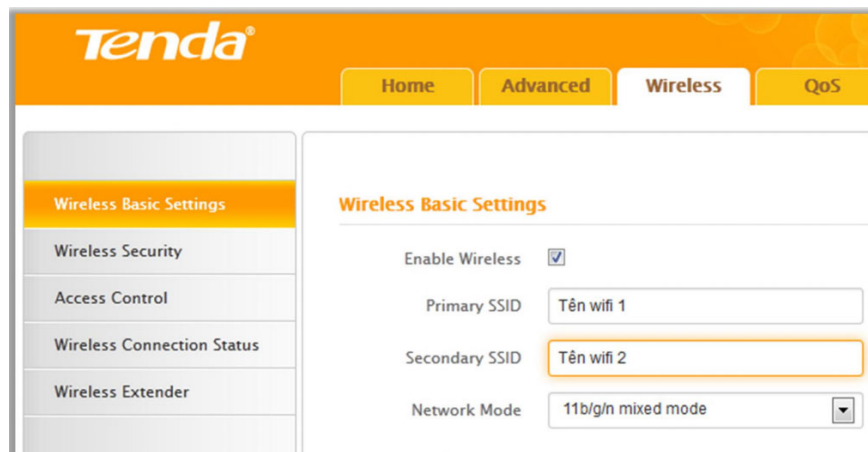

The screenshot shows the 'Wireless Basic Settings' page in the Tenda W311R router's web interface. The 'Wireless' tab is selected in the top navigation bar. On the left, a sidebar menu lists 'Wireless Basic Settings', 'Wireless Security', 'Access Control', 'Wireless Connection Status', and 'Wireless Extender'. The main content area is titled 'Wireless Basic Settings' and contains the following options: 'Enable Wireless' (checked), 'Primary SSID' (set to 'Tên wifi 1'), 'Secondary SSID' (set to 'Tên wifi 2'), and 'Network Mode' (set to '11b/g/n mixed mode').

With SSID is your Wifi network name and Network Mode is the network standard that you play (here I choose 802.11b and g), you can change these parameters as you like. Then click **Wireless Security** to continue

Step 4 : You can choose as shown below

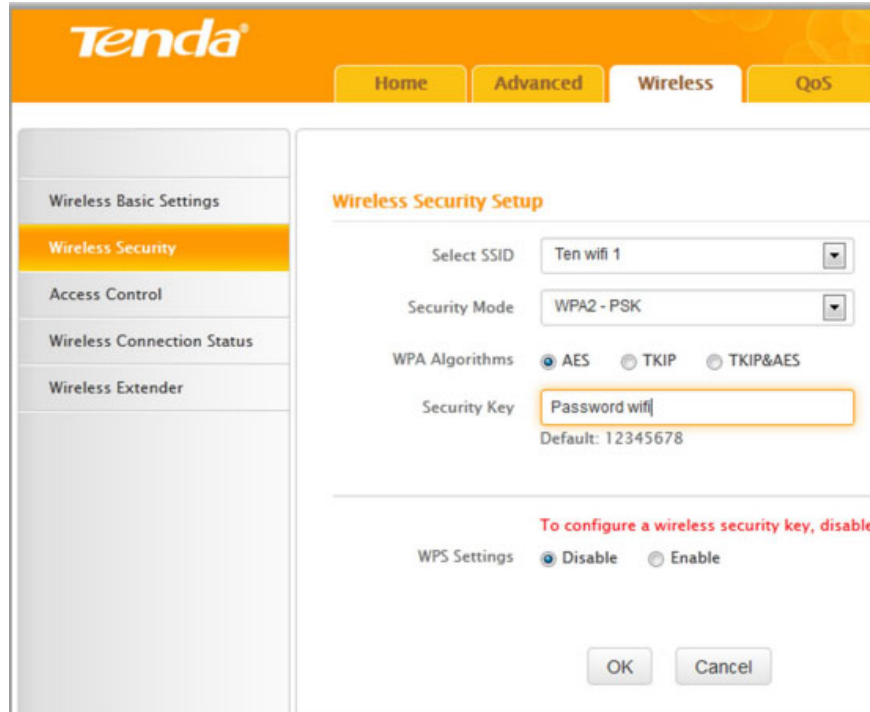

The screenshot shows the Tenda wireless security setup interface. The top navigation bar includes 'Home', 'Advanced', 'Wireless', and 'QoS'. The left sidebar lists 'Wireless Basic Settings', 'Wireless Security' (highlighted), 'Access Control', 'Wireless Connection Status', and 'Wireless Extender'. The main content area is titled 'Wireless Security Setup' and contains the following fields:

- Select SSID: Ten wifi 1
- Security Mode: WPA2 - PSK
- WPA Algorithms: AES, TKIP, TKIP&AES
- Security Key: Password wifi (Default: 12345678)
- WPS Settings: Disable, Enable

A red note states: 'To configure a wireless security key, disable'. At the bottom are 'OK' and 'Cancel' buttons.

With Security Mode is the security mechanism, enter the password in the **Security Key** box and then select Ok to finish.

You finished reading the article "**Instructions for installing Wifi Router Tenda W311R**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.