

Instructions for removing laptop Acer Aspire ES1-532G

If you are using an Acer Aspire ES1-532G computer and want to remove the laptop to replace the hard drive, clean the fan, replace the RAM, replace the battery, even replace the motherboard, WiFi card, remove the laptop Acer Aspire ES1-532G Please follow this video tutorial.

If you are using an Acer Aspire ES1-532G computer and want to remove the laptop to replace the hard drive, clean the fan, replace the RAM, replace the battery, even replace the motherboard, WiFi card, remove the laptop Acer Aspire ES1-532G Please follow this video tutorial.

The article lists the necessary tools before disassembling the laptop as well as recommendations for removing and cleaning laptops.

Note: The article is compiled from Howfixit's laptop repair series. If your laptop is broken while still under warranty, please bring it to the store to be repaired. We will not be responsible for data loss or loss. When you follow these instructional videos you will have to take the risk yourself, so follow up and do it carefully.

Video tutorial to remove and clean the fan of Acer Aspire ES1-532G

If the laptop is too hot while running or the computer shuts down suddenly, the cause may be that the computer is too hot, the cooling system does not complete its task. One thing you should think about when a laptop is too hot is a cooling fan that accumulates dust, making it impossible to spin or spin at a slow speed, hindering the system's heat escape process. Failure to clean the radiator fan promptly may damage the computer. You can clean the laptop fan according to the instructions below:

Instructions to replace the hard drive on the Acer Aspire ES1-532G

This video tutorial has all the steps to remove and replace the HDD with a new hard drive or faster SSD.

Instructions for changing RAM on Acer Aspire ES1-532G

Changing RAM, upgrading RAM on each computer will have different specific implementations. First, you need to choose the right RAM for your laptop, then follow the instructions below to proceed with installing RAM.

Instructions for changing the battery on the Acer Aspire ES1-532G laptop

When a laptop battery is charged by a bottle or laptop, you may need to replace the battery to ensure its usability. The video below will show you how to perform this simple-sounding listening task.

Remove the WLAN card on the Acer Aspire ES1-532G laptop

This is a video tutorial to remove the WLAN module on an Acer Aspire ES1-532G laptop, with detailed steps and close-up shots to make it easier to imagine, if you already have the tools removed, start.

How to remove the mainboard of the Acer Aspire ES1-532G

The laptop's mainboard is an extremely important part, so the steps of removal should also be careful and correct. Here are detailed instructions:

Remove the DC cable on the Acer Aspire ES1-532G

Video assembly Acer Aspire ES1-532G

When you have completed the repair, remove the parts on the Acer Aspire ES1-532G laptop, you need to put the parts back to install the machine. Here are detailed instructions.

Above is the whole process of removing laptop Acer ES1-532. Hope this information is useful to you.

See more:

1. 8 easy ways to free RAM make the machine run faster
2. Instructions to fix yellow exclamation computer network with only 3 steps
3. 13 things not to do when using a computer

You finished reading the article "**Instructions for removing laptop Acer Aspire ES1-532G**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.