

Instructions on how to change the TP-Link Wifi password


Changing wifi password regularly will help protect your internet better, avoid the case of neighbors using the temple. I will guide you how to change the wifi password on TP-Link modem. You open the browser on your computer or phone and access

Changing the wifi password regularly will help protect the internet of your home better, avoiding the case of neighbors using the temple. Currently on the market there are many different types of wifi modems and of course how to change the wifi password of each type of modem is also different. In the following article, I will guide you in detail how to change the wifi password on TP-Link modem, please follow along.

Step 1 : Open a browser on your computer or phone and access the admin page of the TP-Link modem by entering the address on the back of the modem.


For example, the following modem has admin address is <http://tplinkwifi.net>

Or you can enter 192.168.0.1 or 192.168.1.1

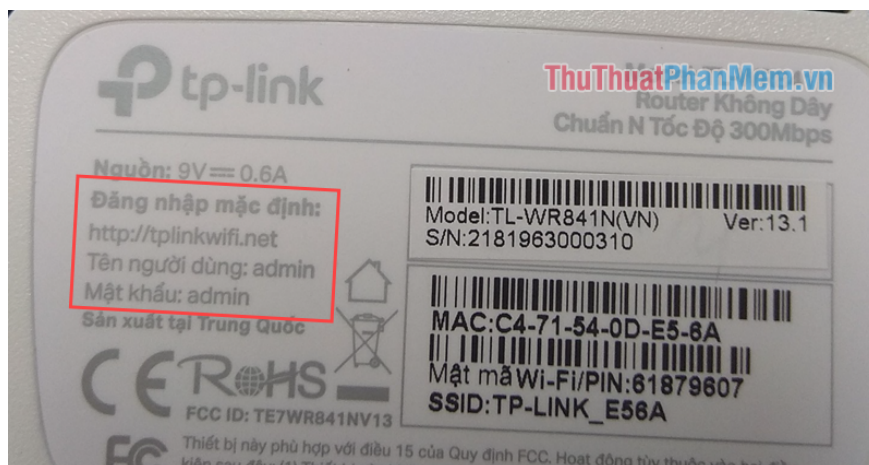

Step 2 : When you access the admin page, you will have to log in with your account and password (written on the bottom of the modem with the IP address shown above).

Usually the account and password will be admin.

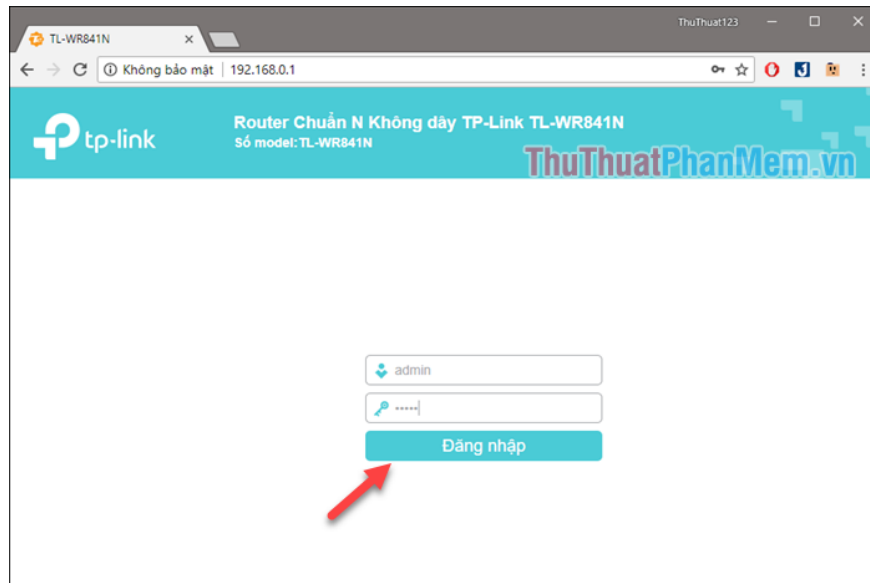


Step 3: After logging in to the admin page, select the **Wireless network** item



Step 4 : Next you select **Secured wireless network** , then you enter a new wifi password box **Password wireless network** .



 Enter the new password, scroll down and click **Save** .

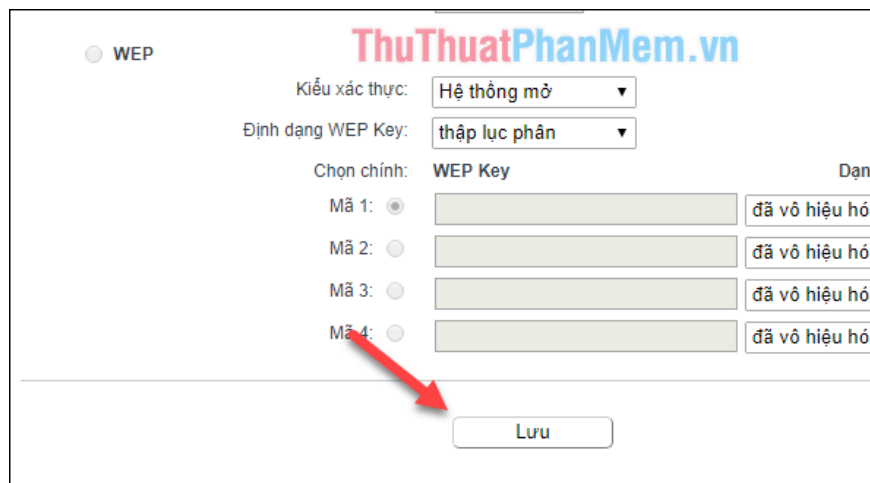

So we have successfully changed the wifi password on TP-Link modem, with completely Vietnamese interface so you can do it easily. Thank you for watching the article!

You finished reading the article "**Instructions on how to change the TP-Link Wifi password**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.