

Instructions on how to diagnose Electrolux washing machine error codes

When the Electrolux washing machine encounters a problem, the machine will notify via flashing lights and error codes appear on the screen. Since then, users or repairers can catch errors to fix problems faster.

Electrolux is one of the most popular washing machine brands in use today, due to its outstanding features in each version. During use, sometimes washing machines will encounter a few problems and can not use the machine is unavoidable. The errors on the machine are indicated by the indicator and an error code appears on the screen. In this article, we will guide you step by step into Electrolux washing machine error diagnosis mode.

Step 1: Enter Electrolux washing machine diagnostic mode:

To enter the diagnostic mode, we do the following:

1. Turn off the machine, press and hold 2 STAR / PAUSE buttons and a previous key, turn the program knob to the first position clockwise.
2. Within 2 seconds, the device will enter diagnostic mode. At that time, we see sequential bright LEDs (running) on ??the control surface. To exit the diagnostic mode: **turn off the phone> turn on the phone> turn off the eyes again .**



Step 2: Read the Electrolux washing machine error code:

1. Go to the error code:

1. Turn the program knob clockwise to the 10th position.
2. The last error code (nearest) will be displayed. .
3. To see the previous error code, press the left button of the STAR / PAUSE button.
4. To return to the last error code, press the STAR / PAUSE button.

2. How to read the error code:

1. For Model with LCD screen: Error code displayed on LCD and then compare with error code to find out the reason for the failure.
2. For Model without LCD: The error code will be displayed via the flash on the STAR / PAUSE button. Lights flashing Red and Blue (0.5 seconds bright, 0.5 seconds off, 2.5 seconds off).
3. The Green light on the STAR / PAUSE button displays the second number of the error code.
4. The Red light on the STAR / PAUSE button displays the first number of the error code

Note : The letter E represents (Error), which means that the error code is not displayed.

The first number in the error code is Hexa (system 16) means:

1. 10 Read flashes are A.
2. 11 flashes of reading are B.
3. Twelve flashes read as C.
4. 13 readings are D.
5. 14 readings are E.
6. Fifteen read flashes are F.



Report code 0 = LED off 1 = LED blinking.

Signs: Alarm is on = E11 LED L26 - 29 = 0 0 0 1 LED L30 - 33 = 0 0 0 1

Error description:

The problem with water filling the washing phase, is = E10 Effect = Stop cycle.

Reason

1. Tap closed or inadequate pipeline pressure,
2. Solenoid valve, hydraulic circuit of pressure switches, pressure switches, main PCB wiring.

Signs: Alarm code = E12 LED L26 - 29 = 0 0 0 1 LED L30 - 33 = 0 0 1 0

Error description:

The problem with water entering in the stage is code = E10 Effect = Stop cycle

Reason:

Tap closed or inadequate pressure pipe, solenoid valve, hydraulic circuit of pressure switches, pressure switches, main PCB wiring

Signs: Alarm code = E21 LED L26 - 29 = 0 0 1 0 LED L30 - 33 = 0 0 0 1

Error description:

Problems with sewers during the washing phase. E20 Effect = Stop cycle

Reason:

Discharge of obstructed pipes; filter blocking; Drain pump, pressure switch, main PCB wiring.

Signs: Code alarm = E22 LED L26 - 29 = 0 0 1 0 LED L30 - 33 = 0 0 1 0

Error description:

Problems with drains during drying or condensate drying are blocked. E20 Effect = Stage heating

Reason:

Discharge of clogged faucets, containment filters, stop condensing, drainage pumps, pressure switches, main PCB wiring

Signs: Alarming = E31 LED L26 - 29 = 0 0 1 1 LED L30 - 33 = 0 0 0 1

Error description:

Electronic circuit pressure switch faulty. Effect = Cycle blocked with door closed

Reason:

Electronic pressure switch, main PCB wiring.



Step 3: Delete the Electrolux washing machine error code:

After correcting the error, it is necessary to delete the error code before the machine will work normally again.

1. Enter the diagnostic reading mode and turn the dial to position 10 (Read the error code).
2. Press and hold the STAR / PAUSE buttons and the options button on the left.
3. Hold until the LED on the STAR / PAUSE button stops flashing (at least 5 seconds).

Electrolux washing machine tutorial video EWP85752

The above is a detailed guide so you can enter error reading mode as well as a few error codes on the Electrolux brand washing machine. You can also refer to LG washing machine error codes, Sanyo Toshiba for more information when diagnosing "diseases" for each washing machine today.

Refer to the following articles:

1. Washer errors and how to fix them
1. Fix some common errors on Toshiba TV
1. How to connect a laptop to a TV using an HDMI port

I wish you all success!

You finished reading the article "**Instructions on how to diagnose Electrolux washing machine error codes**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.