

# Learn the most common Mitsubishi air conditioner fault codes

Don't miss the TipsMake.com article if you want to know more about Mitsubishi air conditioner and air conditioning codes.

Mitsubishi air conditioner is a product of Mitsubishi brand, Japan. Like many current regulators, Mitsubishi air conditioners may also experience some errors during operation. The TipsMake.com article will help you find out more about the most common **Mitsubishi air conditioning and air conditioning codes** .

## Air conditioner error code, Mitsubishi Electric air conditioner

1. **1102** : Abnormal discharge temperature
2. **4330** : Error of preheating preheating radiator
3. **1111** : Saturated temperature sensor error
4. **4340** : Preliminary overload protection error
5. **1112** : Temperature sensor error, low pressure, low saturation level
6. **4350** : Preliminary overcurrent protection error
7. **1113** : Temperature sensor error, abnormal temperature, liquid saturation level
8. **5101** : Air input error
9. **1143** : Lack of cold, weak cold
10. **5102** : Fluid tube error
11. **1202** : Preliminary discharge temperature error
12. **5103** : Error of gas tube
13. **1205** : Preliminary heart tube temperature sensor error
14. **5104** : Liquid temperature sensor error
15. **1211** : Low saturation pressure error.
16. **5105** : Loose duct error
17. **1214** : Error of circuit, THHS sensor.
18. **5106** : Environmental temperature error
19. **1216** : Preliminary cooling coil sensor error.
20. **5107** : Error of power cord jack
21. **1217** : Thermal coil sensor error.
22. **5108** : Unplugged error
23. **1219** : Fault coil sensor error.
24. **5109** : Error of CS circuit
25. **1221** : Environmental temperature sensor error
26. **5110** : Radiator control panel error
27. **1301** : Abnormal low pressure error.
28. **5112** : Air compressor temperature error

29. **1368** : Unusual liquid pressure error.
30. **5201** : Error of pressure sensor
31. **1370** : Intermediate pressure error
32. **5203** : Error of intermediate pressure sensor
33. **1402** : Preliminary high pressure error
34. **5301** : Error of circuit, IAC sensor
35. **1500** : Overload cold error
36. **6600** : Duplicate address error
37. **1505** : Suction pressure error
38. **6602** : Hardware error of transmission processing
39. **1600** : Preliminary cold overload error
40. **6603** : Error of BUS transmission circuit
41. **1605** : Pre-suction pressure temperature error
42. **6606** : Error information
43. **1607** : CS cold block error
44. **6607** : Error without ACK
45. **2500** : Water leak error
46. **6608** : Error without response
47. **2502** : Buoy pump error
48. **6831** : Error not receiving MA information
49. **2503** : Water sensor error
50. **6832** : Error not receiving MA information
51. **4103** : Reverse phase error
52. **6833** : Error sending MA information
53. **4115** : Power signal synchronization error
54. **6834** : Error receiving MA information
55. **4116** : Fan speed error
56. **7100** : Total voltage error
57. **4200** : Error of circuit, VDC sensor
58. **7101** : Error of voltage code
59. **4220** : BUS voltage error
60. **7102** : Connection errors
61. **4230** : Error of the hot dispenser of radiator control
62. **7105** : Error setting address
63. **4240** : Error of overload protection
64. **7106** : Characteristics installation error
65. **4250** : Overcurrent, voltage error
66. **7107** : Error installing sub-branch
67. **4260** : Cooling fan error
68. **7111** : Remote control sensor error
69. **4300** : Circuit fault, VDC sensor
70. **7130** : The connection error is not the same for the cooler
71. **4320** : Initial bus voltage error

## **Error codes for Mitsubishi Heavy cylinders and air conditioners**

Mitsubishi Heavy air conditioners often report flashing lights. Please base on the error message below to determine the condition of the air conditioner and find a suitable solution:

1. **Flash light 1 time** : The indoor unit is damaged, the sensor is broken, the connection is poor
2. **Flashes twice** : Temperature sensor error
3. **Flashes 5 times** : Error of voltage filter, outdoor circuit board
4. **Flash lights 6 times** : Faulty cold motor motor failure or bad connection.
5. **Flashes continuously but only once** : Sensor error on the outdoor unit, the outdoor unit board has trouble.
6. **The lamp flashes continuously for 4 times** : Compression line sensor does not work well.
7. **Timer light flashes once** : Blocked muscle, Power Transtor is touched
8. **Timer light blinks twice** : Error of outdoor unit, block
9. **Timer light blinks 3 times** : Residual gas or components are touched
10. **Timer light blinks 4 times** : Power Transistor error
11. **Timer light blinks 5 times** : Lack of gas, unopened gas valve, sensor failure path.
12. **Timer light blinks 6 times** : Signal line fault, indoor unit board :
13. **Timer light blinks 7 times** : Error of outdoor unit fan, signal line, broken board.

---

Hope that the **air conditioner error code and Mitsubishi air conditioner** : will be useful to you. For more detailed advice on information and usage of air conditioner and Mitsubishi air conditioner, please contact [TipsMake.com](http://TipsMake.com).

You finished reading the article "**Learn the most common Mitsubishi air conditioner fault codes**" edited by the [TipsMake](http://TipsMake.com) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.