

List the default password of the Linksys router

Most Linksys brand routers have the default admin password and the default IP address is 192.168.1.1 but some models are not. Specific details will be available in the table below.

Most Linksys brand routers have the default **admin** password and the default IP address is **192.168.1.1** but some models are not. Specific details will be available in the table below.

Important note : When successfully logged in, don't forget to change the default router password from **admin** to something safer.

The extra help is below the table if you do not see your Linksys model, the default password listed will not work or you have another question.

Linksys default password (valid until November 2018)

Linksys Model	Default user name	Default password	The default IP address
BEFCMUH4	No admin	admin	admin
192.168.0.1	BEFN2PS4	No admin	192.168.1.1
192.168.1.1	BEFSR11	No admin	192.168.1.1
192.168.1.1	BEFSR41	No admin	192.168.1.1
192.168.1.1	BEFSR41W	No admin	192.168.1.1
192.168.1.1	BEFSR41W	No admin	192.168.1.1
192.168.1.1	BEFSR41W	No admin	192.168.1.1
192.168.1.1	BEFSR41W	No admin	192.168.1.1
192.168.1.1	BEFSR81	No admin	192.168.1.1
192.168.1.1	BEFSRU31	No admin	192.168.1.1
192.168.1.1	BEFSX41	No admin	192.168.1.1
192.168.1.1	BEFVP41	No admin	192.168.1.1
192.168.1.1	BEFW11P1	No	192.168.1.1
192.168.1.1	BEFW11S4	No admin	192.168.1.1
192.168.1.1	CG7500	No admin	192.168.1.1
192.168.1.1	E1000	No admin	192.168.1.1
192.168.1.1	E1200	admin	admin
192.168.1.1	E1500	No admin	192.168.1.1
192.168.1.1	E1550	No admin	192.168.1.1
192.168.1.1	E1700	No admin	192.168.1.1
192.168.1.1	E2000	admin	admin
192.168.1.1	E2100	admin	admin
192.168.1.1	E2100L	admin	admin
192.168.1.1	E2500	No admin	192.168.1.1
192.168.1.1	E3000	admin	admin
192.168.1.1	E3200	admin	admin
192.168.1.1	E4200	No admin	192.168.1.1
192.168.1.1	E4200	admin	admin
192.168.1.1	E800	No admin	192.168.1.1
192.168.1.1	E8350	No admin	192.168.1.1
192.168.1.1	E8400	admin	admin
192.168.1.1	E900	No admin	192.168.1.1
192.168.1.1	EA2700	admin	admin
192.168.1.1	EA2750	No admin	192.168.1.1
192.168.1.1	EA3500	admin	admin
192.168.1.1	EA4500	admin	admin
192.168.1.1	EA4500	admin	admin
192.168.1.1	EA5800	no admin	192.168.1.1
192.168.1.1	EA6200	admin	admin
192.168.1.1	EA6100	admin	admin
192.168.1.1	EA6400	admin	admin
192.168.1.1	EA6350	no admin	192.168.1.1
192.168.1.1	EA6900	admin	admin
192.168.1.1	EA6500	admin	admin
192.168.1.1	EA7300	admin	admin
192.168.1.1	EA7500	admin	admin
192.168.1.1	EA8300	No admin	192.168.1.1
192.168.1.1	EA8500	admin	admin
192.168.1.1	EA9200	admin	admin
192.168.1.1	EA9300	No admin	192.168.1.1
192.168.1.1	EA9500	No admin	192.168.1.1
192.168.1.1	WAG120N	admin	admin
192.168.1.1	WAG120N	admin	admin
192.168.1.1	WAG160N	admin	admin
192.168.1.1	WAG160N	admin	admin
192.168.1.1	WAG160N	admin	admin
192.168.1.1	WAG160N	admin	admin
192.168.1.1	WAG310G	admin	admin
192.168.1.1	WAG320N	admin	admin
192.168.1.1	WAG354G	admin	admin
192.168.1.1	WAG54G	admin	admin
192.168.1.1	WAG54GP2	admin	admin
192.168.1.1	WAG54GS	admin	admin
192.168.1.1	WcG200	No admin	192.168.1.1
192.168.1.1	WCG200	No admin	192.168.1.1
192.168.1.1	WCG200	No admin	192.168.0.1
192.168.0.1	WHW0301	2 No	yes No No
192.168.0.1	WHW0302	2 No	yes No No
192.168.0.1	WHW0303	2 No	Yes No No
192.168.1.1	WRH54G	No admin	192.168.1.1
192.168.1.1	WRK54G	No admin	192.168.1.1
192.168.1.1	WRT100	No admin	192.168.1.1
192.168.1.1	WRT110	No admin	192.168.1.1
192.168.1.1	WRT110	No admin	192.168.1.1
192.168.1.1	WRT110	No admin	192.168.1.1
192.168.1.1	WRT120N	No admin	192.168.1.1
192.168.1.1	WRT1200AC	admin	admin
192.168.1.1	WRT150N	No admin	192.168.1.1

admin 192.168.1.1 WRT160N No admin 192.168.1.1 WRT160N-HP No admin 192.168.1.1 WRT160NL No
admin 192.168.1.1 WRT160NL No admin 192.168.1.1 WRT1900AC admin admin 192.168.1.1 WRT1900AC
admin admin 192.168.1.1 WRT1900AC admin admin 192.168.1.1 WRT1900AC admin admin 192.168.1.1
WRT1900ACS admin admin 192.168.1.1 WRT300N No admin 192.168.1.1 WRT310N No admin 192.168.1.1
WRT3200 admin admin 192.168.1.1 WRT3200ACM No admin 192.168.1.1 WRT320N No admin 192.168.1.1
WRT32X No admin 192.168.1.1 WRT32X No admin 192.168.1.1 WRT330N No admin admin 192.168.1.1
WRT350N No admin 192.168.1.1 WRT400N No admin 192.168.1.1 WRT51AB No admin 192.168.1.1
WRT54AG No admin 192.168.1.1 WRT54G No admin 192.168.1.1 WR T54G2 No admin 192.168.1.1
WRT54G3G-AT No admin 192.168.1.1 WRT54G3G-AU No admin 192.168.1.1 WRT54G3G-EU No admin
192.168.1.1 WRT54G3G-ST No admin 192.168.1.1 WRT54G3G-UK No admin 192.168.1.1 WRT54G3G-UK
No admin 192.168.1.1 .1.1 WRT54G3GV2-ST admin admin 192.168.1.1 WRT54G3G-VN No admin
192.168.1.1 WRT54GC No admin 192.168.1.1 WRT54GH No admin 192.168.1.1 WRT54GL No admin
192.168.1.1 WRT54GP2 admin admin 192.168.15.1 WRT54GP2A-AT No admin admin 192.168.15.1
WRT54GR No admin 192.168.1.1 WRT54G-RG No admin 192.168.1.1 WRT54GS No admin 192.168.1.1
WRT54GS2 No admin 192.168.1.1 WRT54G-TM No admin 192.168.1.1 WRT54GX No admin 192.168.1.1
WRT54GX No admin 192.168.1. 1.1 WRT54GX2 No admin 192.168.1.1 WRT54GX4 No admin 192.168.1.1
WRT55AG No admin 192.168.1.1 WRT600N No admin 192.168.1.1 WRT610N No admin 192.168.1.1
WRTP54G admin admin 192.168.15.1 WRTSL54GS No admin 192.168.15.1 WRTSL54GS -TM No admin
192.168.0.1 WTR54GS No admin 192.168.16.1

1) Linksys E4200 routers have two hardware versions, v1 and v2. Version 1 does not require a username, while version 2 requires the default username as admin.

2) Linksys Velop's Wi-Fi mesh router is controlled via Linksys application, so you don't need to know the IP address or username or password of the Velop router.

What to do when Linksys default data above doesn't work?

You really have only one option when the Linksys device's default password or default username has been changed and you don't know what they are: Reset the device to the factory default configuration.

For most Linksys devices, restore the original settings easily by pressing and holding the tiny **Reset** button for at least 10 seconds (30 seconds on older models) and then unplugging and then plugging the device back in. .

If that doesn't work, check your router or other device user guide, where you'll find specific advice for that Linksys model.

You can find your device's user guide in PDF format from Linksys Support.

Restoring the original installation will also return the IP address configured for your Linksys device to 192.168.1.1 or any possible default value, but doing so may cause problems.

If the Linksys router's IP address is all you have, remember that it is similar to the default port (which is configured for your computer and other devices connected to it).

If you have additional questions about Linksys default password, need more help or have a question about the default password in general, contact us for more details.

See more:

1. How to block the website when using the Linksys WRT54GS router
2. 6 steps to block, block website with TP-Link router
3. Fix some problems for Wi-Fi networks

You finished reading the article "**List the default password of the Linksys router**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.
