

 
# Manual Samsung TV remote most detailed

Thanks to the TV remote, you can control all the functions of the TV and support smart TV off and on features, using apps and keyboard operations on the smart TV.

Samsung TV remote seems to have become an integral part of TVs, especially with today's Smart TVs. Thanks to the TV remote, you can control all the functions of the TV and support smart TV off and on features, using apps and keyboard operations on the smart TV.

## How to use TV remote control Samsung J5500, J6300, JU6400

### The buttons on the remote

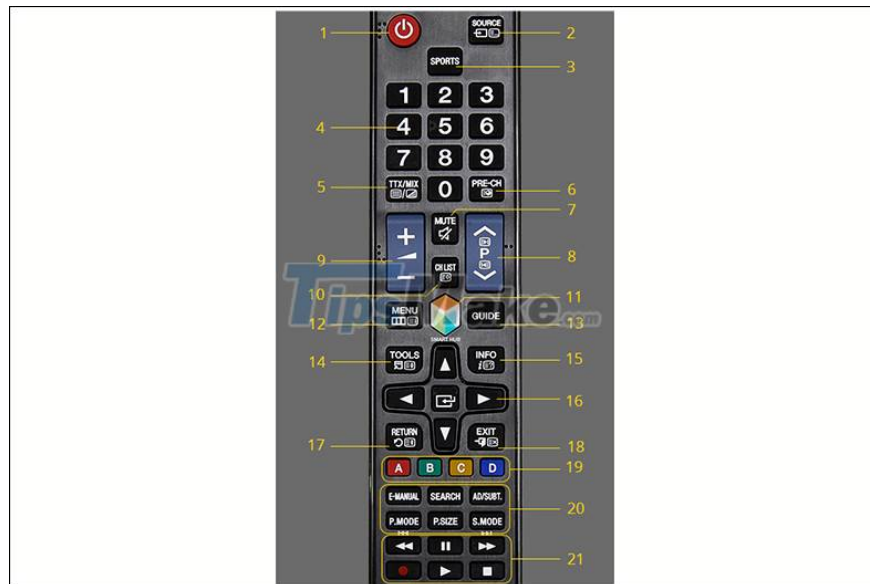

1. Power: TV On / Off button.
2. **SOURCE:** Select the data input source for TV (you can choose to watch TV, USB or HDMI ).
3. **SPORTS:** Select sports photo mode (this mode when watching football will make the picture better).
4. Direct channel selection button
5. **TTX / MIX:** Select Teletext ON, Double, Mix or OFF mode
6. **PRE-CH:** Return to the previously viewed channel.

7. **MUTE:** Mute, turn off the entire volume of the TV temporarily.
8. Switch to another channel
9. Adjust the volume of the TV, increase and decrease the volume as desired.
10. **CH LIST:** Opens the channel list.
11. **SMART HUB:** Open smart interface, surf the web, manipulate apps on TV.
12. **MENU:** Displays a menu of the TV's main setup features.
13. **GUIDE:** Displays the TV manuals.
14. **TOOL:** Quickly select frequently used functions.
15. **INFO:** Display information on the TV screen.
16. Move the cursor on the TV screen to select on-screen menu items, you can change the values ??shown on the TV menu.
17. **RETURN:** Return to the previous menu.
18. **EXIT:** Exits the menu screen.
19. **A, B, C, D:** Special color buttons, in case need to use there will be instructions on TV.
20. **E-Manual:** Displays the e-Manual electronic guide.

**Search:** Use the search function

**AD / SUBT:** Displays **Accesibility** Shortcuts.

**P.Mode:** Change the picture mode.

**P.Size:** Resize the image.

**S.Mode:** Shows a list of audio modes and allows to change modes.

21. These buttons are used for some special features and follow the instructions on the screen (fast forward, slow rewind, pause, record, play, stop .).

## **Frequently used buttons**

### **SOURCE**



### The effect of the SOURCE button

1. Allows users to choose the source of content playback (on TV, connected via HDMI / USB .).
2. Users can also use mirroring images from mobile phones on Samsung TVs.

Usage: You press the SOURCE button, depending on the content you want to watch, choose the appropriate input source (TV / HDMI / USB .). For example, you choose the source as USB, the steps are as follows:

1. Step 1: Plug the USB into the TV
2. Step 2: Press the SOURCE button on the remote
3. Step 3: Select the content of the input source that you want to watch - the USB source is being exemplified.
4. Step 4: Select the content you want to watch and show it on TV

You can do the same with other sources such as TV, HDMI, AV .

### **SPORTS (Sport Mode)**



**SPORTS button effects:** When watching football, sports mode will help clearer images, vibrant sound, giving users the truest feelings.

How to use the SPORTS button:

Step 1: Press the SPORTS button on the Samsung TV remote to turn on the mode.

Step 2: Press the SPORTS button to exit the mode.



## **SEARCH (Search)**



**SEARCH button effects:**

1. Support users to find content on TV faster, find content from app store / Youtube faster and easier.
2. Helps users to quickly launch or quickly download searched content from the TV.

How to use the SEARCH button:

1. Step 1: Select SEARCH -> Enter search content -> Done
2. Step 2: The TV displays the search results

## **SMART HUB (Smart Interface)**



SMART HUB button effects: Enjoy playing games, watch Youtube, online Facebook, read news on electronic newspapers, download new applications .

To use the Smart HUB button:

1. Step 1: Press the Smart HUB button.
2. Step 2: Select the content you want to enter (Web, Youtube, Facebook .)
3. Step 3: Select a browser to be able to surf the web.
4. Step 4: Finally you can surf the web looking for information.

## REC



REC button effect: Record the TV broadcast on the USB or hard drive for playback.

 
How to use the REC button to record:

1. Step 1: Connect the USB or hard drive to the TV
2. Step 2: Press the REC button to start recording.
3. Step 3: Select Yes when the message 'Do you want to start recording' appears.
4. Step 4: Wait for the TV to record.

5. Step 5: After recording the program, select Stop and select Yes to finish recording.

How to play back the recorded TV content:

1. Step 1: Select SOURCE, choose the USB source (if you choose to save it in USB).
2. Step 2: Open the CONTENTS folder. This folder is made available by the TV.
3. Step 3: Select the content that the TV just recorded and press play it to be able to watch the program again.

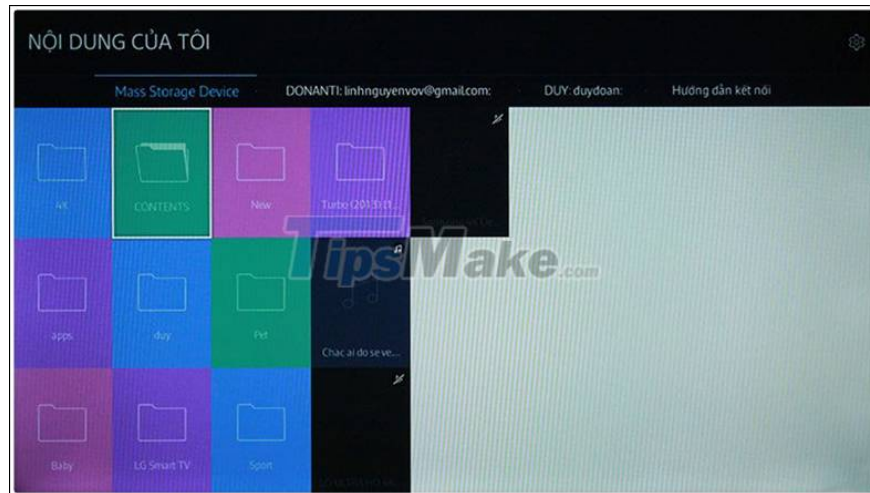

## How to use TV remote control Samsung K5500, KU6000, KU6100, K6300

The buttons on the remote



1. Power (turn on, turn on the TV).
2. Display the numeric keypad (used when selecting a channel, entering password .).

3. Display additional information (when a feature is on, press this button, the TV will display related information and options).
4. OK button.
5. Orientation button (used when need to move up, down, left and right).
6. Start playing / Pause playing (used when playing music, playing movies .).
7. Go back.
8. Open the TV home page interface.
9. CH: Press this button to switch channels, VOL: push this button to increase / decrease the volume.

## **Frequently used buttons**

### **Home (button with house picture)**




Effects of the Home button: Opens the home screen of the TV, where features, applications, options . will be displayed.

How to use: Press the Home button ---> select the feature you want to use. For example, after pressing this button, you can open the application, go to TV settings, switch to the TV viewing feature, select data input for the TV .



123 button effect: Displays numeric keypad on TV.

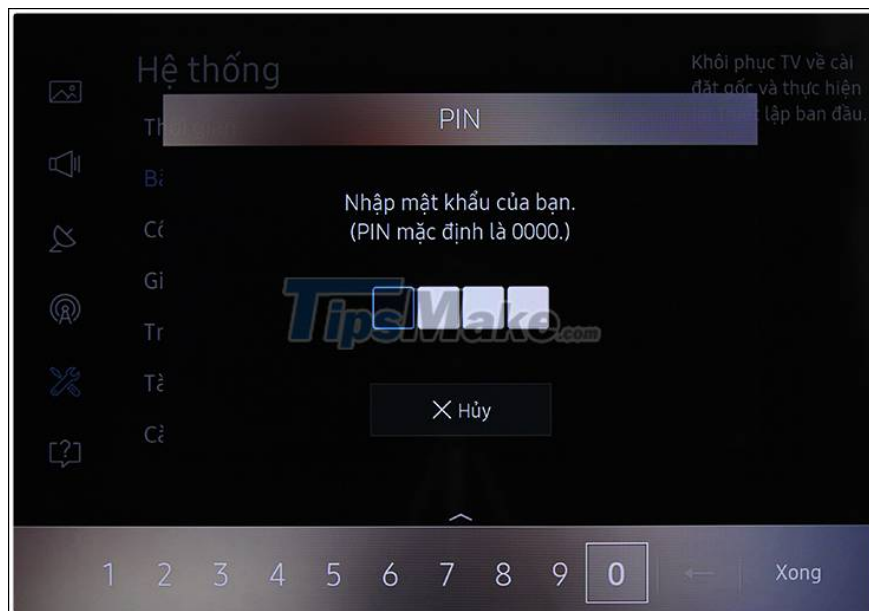

How to use: Press the button 123 on the remote control, select the corresponding number. For example, this button you need to use when selecting the channel number, entering the password of the TV .

## How to use the Samsung KU6400, KU6500, KS7000, KS7500, KS9000 TV remote

The buttons are on the remote



1. Power (turn on, turn on the TV).
2. Microphone (used when using the voice control feature).
3. Press this button to start using the voice control feature.
4. Display the numeric keypad (used when selecting a channel, entering password .).
5. Display additional information (when a feature is on, press this button, the TV will display related information and options).
6. Navigation buttons (used when need to move up, down, left and right).
7. OK button.
8. Return.
9. Start playing / Pause playing (used when playing music, playing movies .).
10. Open the TV home page interface.
11. CH: push this button to change the channel, VOL: push this button to increase / decrease the volume.

## **Frequently used buttons**

**Home (button with house picture)**



Effects of the Home button: Opens the home screen of the TV, where features, applications, options .

How to use: Press the Home button ---> select the feature you want to use. For example, after pressing this button, you can open the application, go to TV settings, switch to the TV viewing feature, select data input for the TV .

## 123



Effect of button 123: Display numeric keypad on TV.

Usage: Press button 123 on the remote, select corresponding number. For example, this button you need to use when selecting the channel number, entering the password of the TV .

## Navigation and OK button



Effects: Helps you navigate on TV and select the right features you want to use.

How to use: Press the 4 buttons up, left and right to move, press the OK button (the middle button to confirm selection).

### Voice control microphone



Voice Control Microphone Effect: Allows you to use the TV control feature through commands in English.

Using:

1. Step 1. Press **Home** on the remote control TV -> choose **Settings** -> select **System** -> select **Settings expertise** -> select **Interactive Voice commands** -> select **Voice Feedback** to confirm the use of this feature.
2. Step 2. Press the **button with the microphone** -> mouth towards the microphone -> speak to control.

Note: This feature is only available when you have standard English pronunciation.

You finished reading the article "**Manual Samsung TV remote most detailed**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.

