

Quick fix No Service error on iPhone 7 and iPhone 7 Plus

Newly released, but iPhone 7 and iPhone 7 Plus have encountered some errors. Especially recently, many users of iPhone 7 and iPhone 7 Plus have encountered a No Service error. So how to fix this error, invite you to refer to the following article of Network Administrator.

Newly released, but iPhone 7 and iPhone 7 Plus have encountered some errors. Especially recently, many users of iPhone 7 and iPhone 7 Plus have encountered a No Service error. So how to fix this error, invite you to refer to the following article of Network Administrator.



1. Causes of No Service error on iPhone 7 and iPhone 7 Plus

The main cause of the No Service error on iPhone 7 and iPhone 7 Plus is because the radio signal on the device has been turned off.

Usually the signals will be turned off automatically when any problems occur with Wifi and GPS.

2. Some solutions to fix No Service errors

2.1. Change SIM card

SIM cards can also cause No Service errors on iPhone 7 and iPhone 7 Plus. So to fix the error you should check if the sim card has been inserted properly or try to remove the old sim and replace a new sim and check if the error is still there.

2.2. Turn off and open airplane mode (Airplane mode)

The easiest and fastest way to fix the No Service error on iPhone 7 or iPhone 7 Plus is to turn on the airplane mode then turn it off.

To turn off and open airplane mode on iPhone 7 and iPhone 7 Plus, all you need to do is swipe down from the screen to open the iPhone's quick settings window. Here you will see the bat icon on the left side of the screen. Click the airplane icon to open Airplane Mode, then press the airplane icon again to turn off airplane mode.

2.3. Restart iPhone 7 or iPhone 7 Plus

If you have applied the above solutions but still cannot fix the No Service error on iPhone 7, iPhone 7 Plus. The next solution you can think of is rebooting the device to fix the error.

Just turn off your iPhone 7 or iPhone 7 Plus, then wait for a few minutes to proceed and check to see if the error is still there.

2.4. Reset network settings on iPhone 7 or iPhone 7 Plus

The final solution to fix the No Service error on iPhone 7, iPhone 7 Plus is to reset the network settings. When applying this solution, you will not delete any data, images or phone information. However, all Wi-Fi connection history, and network-related data will be erased.

To reset the network settings, open the **Settings => General => Reset => Reset Network Settings application.**

Refer to some of the following articles:

1. The 5 most common errors on Galaxy S7 / Galaxy S7 Edge and how to fix them
1. How to fix lost Bluetooth error on Windows 10 Settings settings
1. Summary of common errors on iPhone 6, 6 Plus and how to fix errors

Good luck!

You finished reading the article "**Quick fix No Service error on iPhone 7 and iPhone 7 Plus**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.