 


Reset and change the password of the Verizon FIOS Router device

In the following article, TipsMake.com will introduce you the basic steps to reset the default password of Verizon FIOS router device if you forget the access password ...

In the following article, TipsMake.com will introduce you to the basic steps to reset the default password of Verizon FIOS router device if you forget the access password.

First, you access the address **http://192.168.1.1** as usual via the browser, using your management account previously declared:

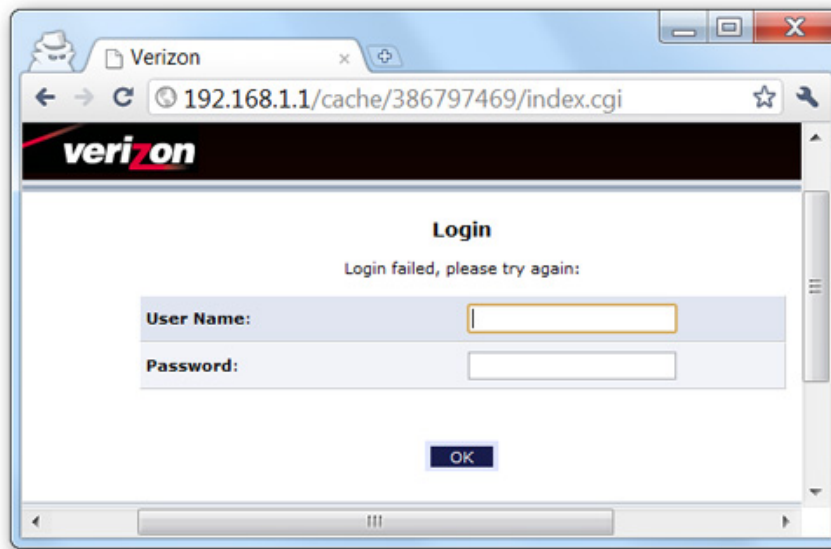

Any Verizon router device has a Reset button on the back, usually with a red circle icon. If you use the tip of a ballpoint pen or something (like a toothpick), press and hold the button until the signal light on the router turns off, then turn it on again. This process usually takes about 10 - 30 seconds:

 


And after resetting the router, the next thing is to use the device's default account, including username and password. Normally the username will be admin, and the password will be one of the following options: password, admin, serial number (each router device has a serial number on the genuine stamp) or a blank password.

If it fails, try resetting and keep trying again. And below is a detailed table of some popular, widely used router models:

					
Model Number	Verizon MI424WR	Verizon 9100VM	Verizon 9100EM	D-Link VDI-624	Actiontec MI424WR
Username	admin	admin	admin	admin	admin
Password	password	password	password	blank	password

And after you have successfully logged in, you need to change this default password. Choose **Quick Links > Change Login User Name / Password** as shown below:

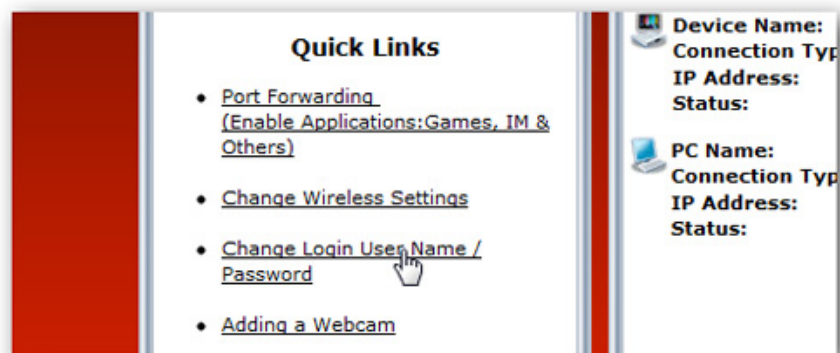

You finished reading the article "**Reset and change the password of the Verizon FIOS Router device**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.

