

The easiest way to reset Toshiba Smart TV

Reset Smart TV Toshiba will help your home TV work more stable and smoother, can bring the TV back to the state like new from the factory.

Reset Smart TV Toshiba will help your home TV work more stably and smoothly, can return the TV to a state like new from the factory. Resetting your Toshiba TV can also help correct remote control problems in models like the Toshiba Fire TV. Please refer to the steps to reset Smart TV Toshiba in our article!

What is Toshiba TV Reset?

Reset Toshiba TV will restore the original settings on the Toshiba TV, returning the TV to the same configuration as when it was shipped. Then you can reset the parameters for Toshiba TV as desired.

When running, the TV will save many applications and programs in memory, sometimes because of conflicts, or a faulty application will affect the TV. In such cases, resetting the TV can be a helpful solution.

Reset Toshiba TV will help:

1. Reinstall the TV from scratch, thereby fixing some errors that arise when using the TV.
2. Erase all personal data, stored data and settings on the TV, returning the TV to its original state like when it was new.
3. Tune back channels, set language and country for TV.

How to reset Smart TV Toshiba

Step 1: Press the Menu button on the TV remote

Picture 1 of The easiest way to reset Toshiba Smart TV

Step 2: Select the cog icon (Settings) in the upper right corner of the TV screen

Picture 2 of The easiest way to reset Toshiba Smart TV

Step 3: Select Reset TV

Picture 3 of The easiest way to reset Toshiba Smart TV

Step 4: Select Erase everything to start the process of factory resetting the TV

Picture 4 of The easiest way to reset Toshiba Smart TV

Step 5: Setup

1. Choose your language
2. Select the Country where you live
3. Choose Subtitle Language according to your needs
4. Choose Where to Use as Home
5. In AutoView, select Yes to allow your TV to automatically adjust the picture to the lighting conditions of the environment. Note, if you do not want to use this feature, select No
6. Under Ambient type, select Fluorescent or Bulb depending on your home's lighting conditions.
7. Select Start to let the TV scan for channels automatically

With the above 5 simple steps, you can completely make your TV run smoother and more stable. Good luck!

You finished reading the article "**The easiest way to reset Toshiba Smart TV**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.