

Trick to fix iPhone phone not vibrate when there is an incoming message

The phenomenon that the iPhone does not vibrate when there is an incoming message makes users feel inconvenient because they have to open the check. Although it does not affect the quality of the device, many important and urgent messages will be ignored.

There are many reasons why iPhone does not vibrate when a message arrives, so what is the way to fix the phenomenon of iPhone not vibrating when there are messages?

The reason iPhone does not vibrate when there is an incoming message can be caused by many factors such as: software conflict error, strong collision in the process of using the phone or water drop affecting the internal circuit.

Sometimes the user accidentally leaves the phone in do not disturb mode. One reason why iPhone does not vibrate when there is a message may be due to the improper contact between the vibrating motor and the main.

To overcome the phenomenon of iPhone not vibrating when there are messages to, users can try a few tips below:



1. Reboot the device

Restarting the device is a simple but effective method to help users overcome the problem of iPhone not vibrating when a message arrives. Because for a long time of operation, it may cause the applications installed on the iPhone to conflict with each other, causing this phenomenon.

2. Check if the 'Do Not Disturb' feature is enabled

The 'do not disturb' feature allows users to remove notification of calls and messages, and of course if the user is turned on this feature will not receive a vibration notification when a message arrives.

So check if the device is turned off by going to Settings> Do not disturb> Turn off Do Not Disturb.

3. Check the vibration setting on iPhone

Go to Settings> Sound & Touch> Turn on the two options Vibrate on ring and Vibrate when silent. Next, select the Ringtone and choose Vibrate, then choose a vibration pattern to check if your iPhone has lost vibrations.

4. Perform a factory reset

To perform the factory reset, go to Settings - select General - select Reset. Next, select Reset all settings to perform a factory reset.

5. To reputable repair and warranty centers

If you have tried all of the above and still cannot fix the iPhone not shaking when there is an incoming message, quickly go to reputable repair and warranty centers to check and fix.

You finished reading the article "**Trick to fix iPhone phone not vibrate when there is an incoming message**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.