

# Washing machine does not discharge water, this is the cause and remedy

After a period of use, a lot of people encounter the phenomenon of washing machine will not discharge water, if you are also in such a situation, please find out immediately the causes and ways to overcome in the article below.

After a period of use, a lot of people encounter the phenomenon of washing machine will not discharge water, if you are also in such a situation, please find out immediately the causes and ways to overcome in the article below.

## 1 . The lid is closed tightly or stuck

In many cases, the machine does not discharge water because the lid is not tightly closed. Normally, the washing machine lid will be connected to a hidden switch in the machine to ensure that the machine is closed tightly before performing clothes washing to ensure safety for the user. Therefore, before calling the repairman, check the cover carefully to see if it is closed or not.



Completing the preparation for a batch of laundry, you should be careful to check the washer door.

## 2 . The drain hose is clogged


Another possibility is that the washing machine does not drain water because the washing machine's drain hose is clogged or twisted. Correct this problem by carefully checking whether the pipes are clogged so that the machine cannot drain water, if any, try to straighten the tube again, otherwise you can replace another pipe.



Check the water drain hose.

### 3. Belt (curoa) is broken, loose

If the water pipe is stable but the machine still does not discharge, the possibility is high that the belt is broken or loose. When the washer belt fails, the machine will not be able to continue the washing program, so it will not drain out. To know if the belt is damaged, use the screwdriver to remove the back cover of the washing machine and check.

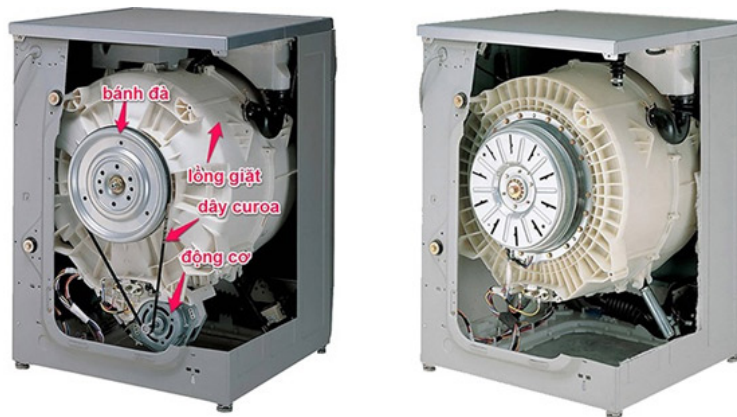

The belt is stretched, slipped out of the engine or worse, broken, causing the machine to fail to discharge water. Changing belts is not easy and must find the right type for the washing machine, so if you do not have the expertise and the necessary equipment, it is best to contact the service center or repair it by replacing it to avoid touching components inside the machine.

**Note:** Before removing the device, do not forget to unplug the washing machine first.

There are only three main reasons why washing machines do not flush water. Take turns checking your washing machine in these ways to "save" it yourself. In case, did all of the above ways that the washing machine still has not been able to discharge water, now you need to contact reputable repair and repair centers for assistance.

See more:

1. 3 simple ways to clean your washing machine effectively
2. How to use washing machine durable and effective?
3. 9 common mistakes when using washing machines and how to fix them

You finished reading the article "**Washing machine does not discharge water, this is the cause and remedy**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.