

Adjusting screen brightness on an Asus laptop.

Adjusting the screen brightness on your Asus laptop allows users to proactively control the display brightness, helping to protect their eyes and save energy. You can use keyboard shortcuts to adjust the screen brightness, or you can access the Windows Mobility Center to adjust the brightness in the laptop's battery settings.

Normally, when you buy a new laptop, manufacturers always set the screen brightness to a standard level, usually 85% to 96%. This brightness level is suitable for the vast majority of laptop users today. If you leave the brightness setting as is, you will need to **adjust the brightness of** your Asus laptop screen to suit the surrounding environment and the actual lighting conditions. This adjustment makes viewing the laptop screen more comfortable and, most importantly, protects your eyes.



Adjusting the screen brightness of an Asus laptop.

How to adjust the screen brightness on an Asus laptop.

To adjust and set the screen brightness on your Asus laptop, you can use one of the following four methods:


Method 1: Use keyboard shortcuts to adjust brightness up or down.

For Asus laptops, the shortcuts are: **Fn + F5, F6 => This means you use the Fn key plus the F5 key to decrease brightness; and Fn plus the F6 key to increase brightness.**




Method 2: Adjust screen brightness in Windows Mobility Center

On computers and laptops running Windows 7, 8, 8.1, and Windows 10, press the **Windows + X** key combination -> then select **Mobility Center** .

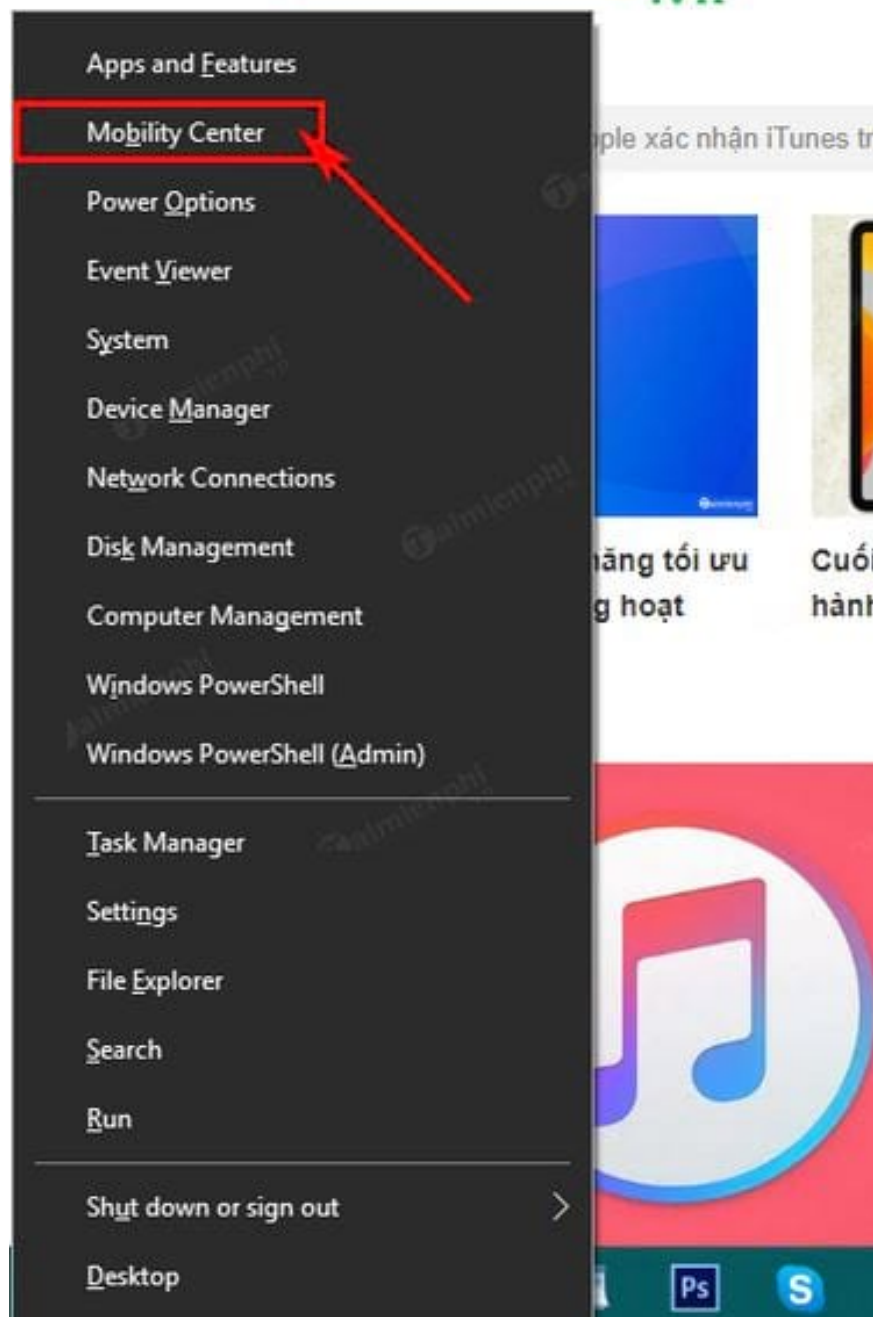

A new window will appear, where you'll see the screen brightness adjustment bar under **Display Brightness** . Here, you can drag the slider to the left or right to increase or decrease the brightness of your computer or laptop screen.

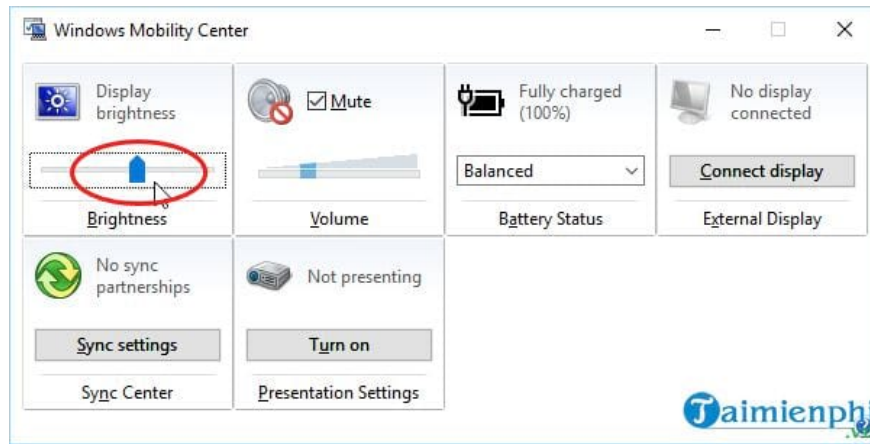


Method 3: Adjust screen brightness in the Battery and Charging settings.

Click on the battery icon in the upper right corner of your laptop screen -> select **Adjust screen brightness**




In the **Balanced** section , select **Change plan settings** as shown in the image below:

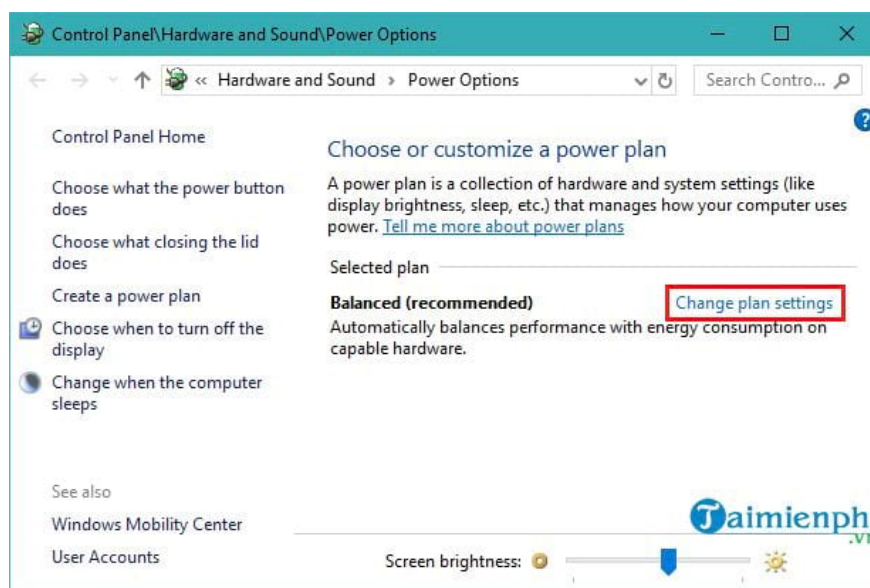

The **Change settings for the plan: Balanced** interface has two columns:

- **On Battery** : When using battery power
- **Plugged In** : When using charger

In **Adjust Plan Brightness** , you can customize the screen brightness to your liking.

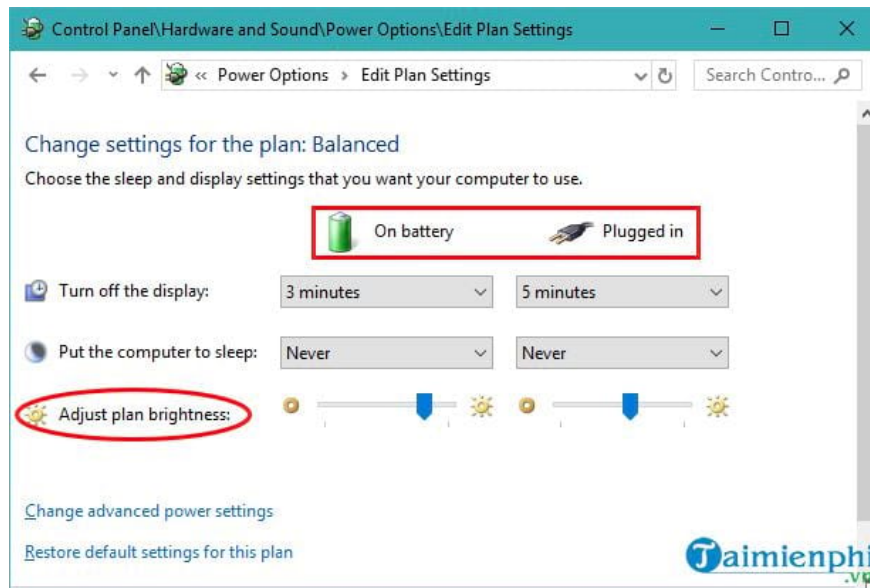

Method 4: Use specialized software to increase or decrease screen brightness.

This method involves using external software and installing it on your laptop to adjust the screen brightness.

You can use one of the following software programs: F.Lux brightness adjustment software , Desktop Lighter software , RedShift GUI software , ScreenBright software . For detailed information about these programs, please see the article "Top 5 screen brightness adjustment software for laptops and desktops" previously introduced by TipsMake.

With the four methods **for adjusting screen brightness on your Asus laptop** described above, you should have some useful information to choose the quickest and most convenient way to adjust your laptop screen brightness.

To increase or decrease screen brightness , using keyboard shortcuts and adjusting brightness in the Battery and Charging settings is probably the most common method. We, when using Asus laptops, also frequently use these shortcuts to quickly adjust screen brightness. How about you? If you're also using an Asus laptop, try our method to increase or decrease screen brightness!

You finished reading the article "**Adjusting screen brightness on an Asus laptop.**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.