

The most detailed guide on how to reset a TP-Link WiFi modem to its default settings.

TP-Link is one of the most popular Wi-Fi routers currently in use. However, errors are inevitable during use. Therefore, resetting your TP-Link Wi-Fi modem to its default settings will help you resolve these issues more easily. If you don't know how to reset your TP-Link router, you can refer to the instructions shared in this article by TipsMake and follow them.

By default, the username and password for a TP-Link router are "admin". However, if you or someone else changes the Wi-Fi password and no longer remembers it, you will no longer be able to access the Wi-Fi network. Worse still, you may not be able to access the modem/router's configuration page to change the Wi-Fi password and set it as a Wi-Fi access point. In this case, you need to reset the TP-Link router/modem to its default settings and reconfigure it as a new device.



How to reset and reconfigure a TP-Link WiFi router.

How to reset a TP-Link WiFi modem, how to set up a TP-Link modem again.

Method 1: Use the Reset button located on the back of the TP-Link modem/wifi router.

Plug in the power to the Wireless Router, press and hold the Reset button (red circle) for about 10 seconds, until all the lights turn on and then off. Then release your finger from the device and wait for it to restart.




*Note: You must always turn on the router before it restarts. The default login IP addresses are 192.168.1.1 and 192.168.0.1, or you can also type <http://tplinklogin.net/> to log in, and the username and password are both set to **admin** .

Additionally, you need to ensure that the IP address is configured with a subnet mask of 255.255.0 and the IP address format is 19.168.0.X (where X is between 2 and 253).

Method 2: Use the modem/router configuration page to reset the TP-Link WiFi router.


Step 1: Access the TP-Link modem/wifi router settings and configuration page by entering the following command into the address bar: **192.168.1.1** .

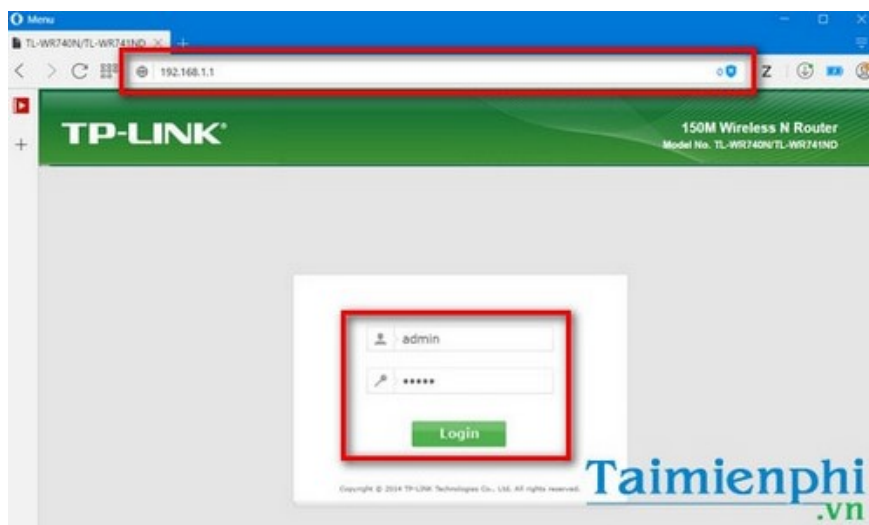

Each modem has a different username and password to access the modem's configuration page, to change the Wi-Fi password, or even to change the TP-Link Wi-Fi administrator username and password.

To find out the Wi-Fi login names for different types of modems, you can refer to the article "Comprehensive list of Wi-Fi login names for each modem type" that TipsMake has shared.

Step 2: Click on **System Tools > Reboot > Reboot** and press **OK** to reset the TP-Link wifi router.

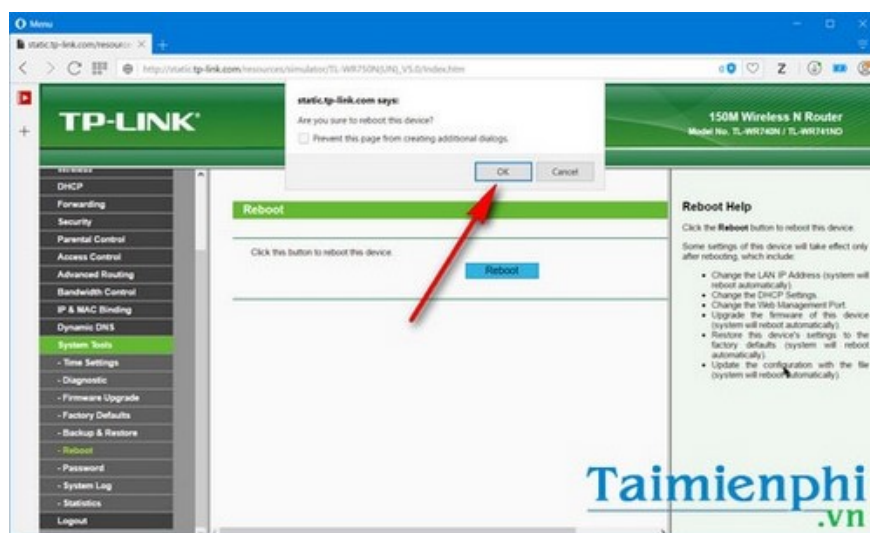

Even if you want to erase all settings and reset your TP-Link router to its factory state, you can select **Factory Defaults > Restore** to restart and reset the TP-Link router.



TP-Link routers are devices that receive network signals from modems and broadcast Wi-Fi to other devices. However, these Wi-Fi broadcasting devices often encounter problems that users frequently face, such as forgetting their Wi-Fi password and being unable to log in. To recover the password, users then have to try various methods, including resetting the TP-Link router.

Also related to configuring TP-Link routers for better coverage and faster network speeds, readers can find detailed instructions on the best **locations to place their Wi-Fi modem** and router to easily increase Wi-Fi coverage and speed.

You finished reading the article "**The most detailed guide on how to reset a TP-Link WiFi modem to its default settings.**" edited by the [TipsMake](#) team. We hope this article has provided you with many useful tech tips and tricks. You can search for similar articles on tips and guides. Thank you for reading and for following us regularly.